

FumeGard Vertical Laminar Flow Clean Air Wet Process Fume Hood

**Model NU-156/E Series
Bench Model**

Operation and Maintenance Manual

**May, 2011
Revision 9**



230VAC Only

Manufactured By:
NuAire, Inc.
2100 Fernbrook Lane
Plymouth, MN 55447
Toll-Free: 1-800-328-3352
In Minnesota: (763)-553-1270
Fax: (763)-553-0459

NOTICE:

This Operation and Maintenance Manual has been prepared to reflect a standard version of NU-156/E FumeGard Vertical Laminar Flow Clean Air Fume Hood.

NuAire offers a wide variety of polypropylene fume hoods to fit individual requirements. The FumeGard series is flexible, designed for selection with the options that meet your specific needs.

Customer or shop drawings prepared for customer approval illustrating variety, plumbing fixtures' locations, work surface configurations and/or other modifications required are appended to this manual.

Errata sheets illustrating any changes to maintenance procedures and/or spare parts are also included.

Any optional equipment that requires instruction, calibration or preventative maintenance is covered by a separate Operation and Maintenance Supplement.

**FumeGard Vertical Laminar Flow
Clean Air Wet Process Fume Hood
Model NU-156/E Series
Bench Model
Operation And Maintenance Manual**

TABLE OF CONTENTS

Section No. 1	General Information
Section No. 2	Construction Features
Section No. 3	Models and Features
Section No. 4	Warranty
Section No. 5	Shipments
Section No. 6	Installation Instructions
6.1	Location
6.2	Setup Instructions
6.3	Certification
Section No. 7	Operating the NU-156
7.1	Operator Control and Indicators
7.2	Operating Guidelines
Section No. 8	General Maintenance
8.1	Fluorescent Lamp Replacement
8.2	Supply Filter/Motor Replacement
8.3	Airflow Adjustments
8.4	Filter Integrity Checks
Section No. 9	Electrical /Environmental Req.
9.1	Electrical
9.2	Operational Performance
9.3	Light Exposure
9.4	Installation Category
9.5	Pollution Degree
9.6	Chemical Exposure
9.7	EMC Performance
Section No. 10	Optional Equipment
10.1	Ground Fault Interrupter
Section No. 11	Disposal & Recycle
Section No. 12	Polypropylene
Section No. 13	Replacement Parts

DRAWINGS

ACD-03004.....	NU-156 Airflow Schematic
BCD-05967.....	NU-55 Polypropylene Bases
BCD-05973.....	NU-156 Standard Bench Model W/Options
BCD-05378.....	NU-156 Standard Bench Model
BCD-05974.....	NU-156 Installation Assy.
BCD-05979.....	NU-156 Filter Removal Procedure
BCD-05957.....	Fumehood/Base Cabinet Installation
BCD-05831.....	NU-156 Electrical Schematic

CONGRATULATIONS!

You have just purchased one of the finest all polypropylene FumeGard Vertical Laminar Flow Clean Air Fume Hoods available. With proper care, maintenance (certification), and laboratory procedure, this fumehood will give you years of product and personnel protection from particulate contaminants as prescribed in NSF/ANSI 49 as well as ASHRAE Standard 110-1995, "Personnel Protection for Fume Hoods." Please read this manual carefully to familiarize yourself with proper installation, maintenance and operation of the fumehood.

ACKNOWLEDGMENT

NuAire, Inc. acknowledges that some material in this manual reflects information supplied by the National Institutes of Health personnel both in verbal and written specifications. In particular, NuAire acknowledges that information in Section 8 was obtained from the following source:

Technical Report No. FPS 5650000001. Prepared by Dow Chemical Co., for the National Cancer Institute, May 1, 1972.

**FumeGard Vertical Laminar Flow
Clean Air Wet Process Fume Hood
(Total Exhaust)
Model NU-156/E Series
Manufactured By:
NuAire, Inc. - Plymouth, Minnesota**

1.0 General Information

1.1 Description

NuAire's all Polypropylene Model NU-156/E FumeGard Vertical Laminar Flow Wet Process Fume Hood is a bench module fumehood which utilizes the latest state-of-the-art technologies in laminar airflow design, materials and manufacturing processes. The modular constructed fumehood can be used anywhere space permits where product (work-in-process) and personnel protection are required for chemical research, microelectronics, semi-conductor design/development and/or production assembly processes. Bench fumehoods consist of a single piece construction and can be placed on a customer bench or on a special option polypropylene base provided for the Fume Hood. A significant number of design innovations give the NuAire laminar flow equipment superior performance qualities in airflow, lighting, noise levels and vibration. In addition, NuAire's "Narrow Line Design" technique achieves excellent appearance and ruggedness through the use of large modular components, reinforced construction techniques and contrasting color schemes.

The Model NU-156/E FumeGard Vertical Laminar Flow Clean Air Polypropylene Wet Process Fume Hood is a product resulting from the development of the "laminar" flow principle, the application of environmental controls in the fields of biological research or chemical containment and the necessity to provide a chemically inert and resistant work space. The wet process fume hood, when used with proper laboratory technique, is an effective laboratory aid in obtaining optimum control over product quality while reducing the potential for exposure of both product and personnel to airborne particulate chemical agents as well as fumes and vapors generated as a result of work-in-progress operations.

The NU-156/E FumeGard has been designed and tested to the performance criteria as established by the NSF/ANSI 49 for Fume Hoods. In addition, the NU-156/E meets or exceeds ISO Class 4 air quality conditions and the testing procedures as outlined by the Institute of Environmental Sciences Standard IEST-RP-CC-002.2, "Unidirectional Flow Clean Air Devices." The NU-156/E has been independently tested for its containment properties (i.e. personnel protection) to ASHRAE Standard 110-1995 for Fume Hoods, with a Performance Hood Rating of 4.0 A.M. at less than 0.05 PPM (instrument's limit of detection) when operating at a sash height between 8 and 12 inches (203 and 305mm).

1.2 Safety Instructions

These safety instructions describe the safety features of the FumeGard Model NU-156/E.

The Fume Hood has been manufactured using the latest technological developments and has been thoroughly tested before delivery. **However, the Fume Hood may present potential hazards if it is not installed and used as instructed for its intended purpose or outside of operating parameters.**

 
Therefore, the following procedures must always be observed:

- The Fume Hood must be operated only by trained and authorized personnel.
- For any operation of this Fume Hood, the operator must prepare clear and concise written instructions for operating and cleaning, utilizing applicable safety data sheets, plant hygiene guidelines, and technical regulations, in particular.
 - Which decontamination or deactive measures are to be applied for the Fume Hood and accessories?
 - Which protective measures apply while specific materials are used?
 - Which measures are to be taken in the case of an accident?
- Repairs to the device must be carried out only by trained and authorized expert personnel.
- Keep these operating instructions close to the Fume Hood so that safety instructions and important information are always accessible.
- Should you encounter problems that are not detailed adequately in the operating instructions, please contact your NuAire Representative of NuAire technical Services.

1.3 Explanation of Symbols



Safety alert symbol indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.



Safety alert symbol indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

CAUTION

CAUTION used without the safety alert symbol indicates a potentially hazardous situation which, if not avoided, may result in property damage.



Potential electrical hazard, only qualified person to access.

NOTE:

Used for important information.



Flammable Hazard



Biohazard



Hazardous Gases! Personal Protection Equipment Required.



Ground, Earth




Lead Free



Chemical Hazard

ROOM AIR PREFILTERS (2)

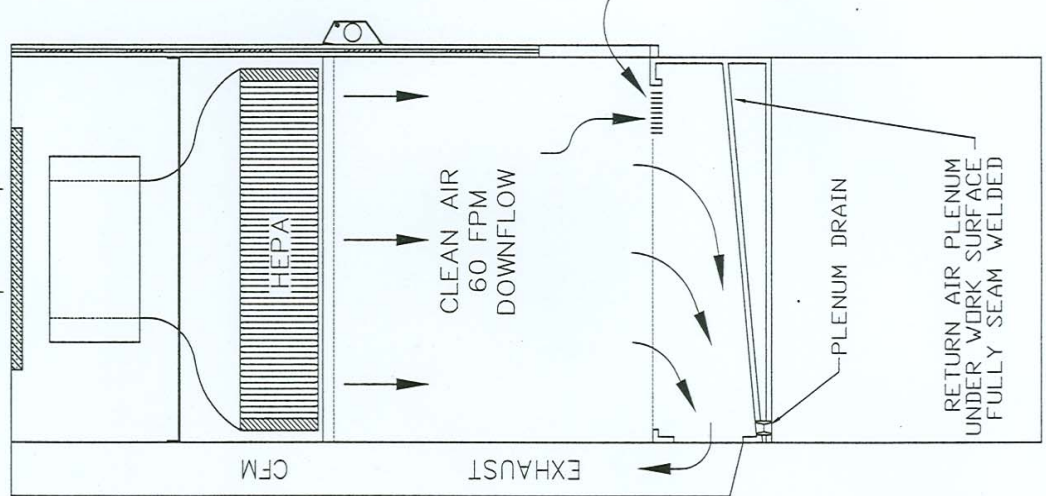

EXHAUST FLOW (CFM)		
CABINET WORK ZONE LENGTH	DEPTH	31-1/2"
4'	689	785
5'	905	1032
6'	1120	1276
8'	1550	1766

* PERSONNEL PROTECTION ALARM OVER 12 INCHES AND PRODUCT PROTECTION DETENT AT 8", 10", AND 12" OPENING

 NUAIRE PLYMOUTH, MINNESOTA		PROPRIETARY THE INFORMATION CONTAINED HEREIN IS THE EXCLUSIVE PROPERTY OF NUAIRE INC. AND IS NOT TO BE DIVULGED OR USED IN ANY MANNER WITHOUT THE EXPRESS WRITTEN PERMISSION OF NUAIRE INC.	
DFTM	PS	5/17/89	
CHKD			
APPR			
UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES - TOLERANCES - DECIMALS ±.032 ANGLES ±2°			
TITLE		NU-150 SERIES LAMINAR AIRFLOW EXHAUST WORK STATION	
MATERIAL			
NUMBER	ACD-03004	E	
DO NOT SCALE DRAWING		SHEET 1 OF 1	

2.0 Construction Features

The following construction features apply to bench style Fume Hoods. Bench Fume Hoods consist of single piece construction and can be placed on a customer bench or on a special option polypropylene base provided for the Fume Hood (see BCD-05973 and BCD-05378.)

Standard Features

- 2.1 The FumeGard NU-156 is constructed from all stress relieved, fully seam welded polypropylene. The outer Fume Hood shell, inner workspace walls, spill trough plenum under workspace and shelves are constructed from 1/2-inch (12mm) polypropylene. The exhaust duct, access panels, and work surface are constructed from 1/4-inch (6mm) polypropylene. All polypropylene walls are reinforced where required to maintain structural integrity. Flame retardant polypropylene is available as an optional Fume Hood material.
- 2.2 NU-156 FumeGards are constructed to be 100% metal free and using absolutely no nylon components. The basic construction is polypropylene, but depending upon customer requirements, the following thermoplastics may be used: (1) PVC, (2) polypropylene, (3) flame retardant polypropylene, (4) flame retardant polyethelene, (5) PVDF Kynar or (6) TFE, Teflon. Any customer requirement that dictates metal to be used (i.e. such as black pipe for gas may be epoxy coated or Teflon coated per customer direction.)
- 2.3 Sliding vertical, fully counterbalanced sashes are provided as standard on all FumeGard Fume Hoods. The sashes provide for a work access opening from 8 to 12 inches (203 to 305mm). The sliding sash is constructed of 1/4 inch (6mm) scratch resistant polycarbonate as standard, inset into the polypropylene glide channels. A counter weight balance, encased in sealed PVC pipe is located in the plumbing chase. The counter weight is connected to the top of the sash via polypropylene cable that rides over two machined polypropylene pully's. Access panels are provided on top of the hood for maintenance of the counterweight balance system.
- 2.4 All Fume Hoods are "double wall" construction, consisting of an outer wall separated by a 4 inch (102mm) space and the interior work space wall of the Fume Hood. This area forms the plumbing chase for the routing and connection of all services required in the Fume Hood, including electrical outlets. The plumbing chase is a completely enclosed compartment. It is constantly under negative pressure, to minimize any fume build-up that may occur.
- 2.5 Base storage cabinets are provided as an option with a compartmentalized shelf area and a large storage area. The large storage area houses the plumbing for any sinks with a "P" trap installed per customer requirements. A single fixed shelf is also provided. All base cabinet compartmentalized areas are vented internally by vent tubes (one per compartment) via the exhaust plenum. The floor of the base cabinet has a one-half inch high lip to contain spills.
- 2.6 The prefilter located over the blower for the supply (downflow) air is one-inch thick, disposable, non-woven fiberglass media with a nominal efficiency of 40% by NB Test Method using atmospheric dust.

- 2.7** The FumeGard uses a backward inclined motorized impeller controlled by a solid state motor speed control for the supply (internal downflow) air. The fan blades are plastic which is corrosion resistant to withstand normal laboratory or chemical fumes.

The blower/motor will automatically compensate for airflow as the filters load with particulate to achieve a fan delivery falloff of no more than 10% as a result of a 60% increase in pressure drop across the filters. With the use of the speed control, a greater than 150% increase in pressure drop across the filter is achievable.

- 2.8** The work area (see Airflow Schematic, Drawing ACD-03004) consists of the following items, going from front to back: the airfoil, the work access opening at 10 inches (254mm), the high density perforated inlet grill, the removable solid (reinforced) 1/4-inch (6mm) polypropylene work surface, high density perforated rear grill and drain spillage plenum below the work surface containing base cabinet vents. The top lip of the airfoil is 1 inch (25mm) above the removable work surface, which extends the full length and width of the work space.
- 2.9** Air is drawn through the prefilter on the top of the Fume Hood by the blower supplying clean HEPA filtered air down through the work space interior at 60 LFPM (.30 m/s). Fifty percent of the air leaves the work space via the perforated area in the rear and via a similar perforated area in the front along with the air drawn through the front work access opening at 105 LFPM (.53 m/s) average. All of the air is exhausted via the rear duct.
- 2.10** The motorized impeller requires 115 or 230 VAC, single phase, 50/60Hz power and will not exceed a temperature of 105°C. In a maximum ambient temperature of 48°C (120°F) under any maximum load condition. The thermal protector will not trip 115% of the rated voltage under maximum load and ambient temperature conditions. The motor is rated for 24-hour continuous operation and is lubricated for life.
- 2.11** Electrical power is supplied on two internal circuits: One for blower and lights and the other for duplex outlets from a single 20 Amp power source. All electrical components are grounded back to electrical source, to meet grounding continuity requirements for electrical safety.
- 2.12** Access panels are provided in both the interior and exterior sidewalls for access to plumbing fixtures. The panel is 1/4-inch (6mm) thick and mounted flush with the 1/2-inch (12mm) thick sidewall held in place with 8-32 polypropylene flat head screws.
- 2.13** The HEPA filter is of standard size, as a wood framed separatorless type, 99.99% efficient on all particulates, and replaceable from the front. It can be checked on site using PAO smoke to establish integrity of the filter efficiency. PAO is introduced into the blower compartment by removing the prefilter. A pressure probe (normally plugged at Fume Hood top) is used to measure the PAO concentration within the HEPEX pressure plenum, if the measuring instrument requires an upstream count.

Optional Features

- 2.14** Remote controlled plumbing service fixtures can be installed in either or both sidewalls (maximum of four per sidewall). Plumbing connections exit the rear of the sidewall. The type of service is indicated by a colored petcock. Polypropylene needle valves and 1/2 (12mm) polypropylene plumbing for high pressure gases are optionally available.
- 2.15** An outlet with PVC drip-proof covers can be located in the interior on either or both sidewalls. Alternatively, they can be located on the exterior front of the plumbing chase. Outlets are rated at 115 or 230 VAC 15 amperes maximum.
- 2.16** A Ground Fault Circuit Interrupter (GFI) (115 VAC only) can be purchased to replace the standard outlet either within the work space sidewall or the exterior front of the sidewall.
- 2.17** A 12" x 12" x 5" (305mm x 305mm x 127mm) sink constructed from 1/4-inch (6mm) polypropylene, is optionally available as standard (smaller or larger sizes are available; larger sizes excessively disrupt interior laminar flow.) Greater sink depths are available at the expense of less storage cabinet space. Sinks are available on either the left or right side of the Fume Hood and include a polypropylene strainer and "P" trap. The cabinet space beneath the sink has no shelf. The "P" trap is plumbed through the rear wall above a plumbing access panel for customer connection to the sewer line.
- 2.18** Single, double or triple cascade rinse tanks constructed from 1/4" (6mm) polypropylene are available which feature: (1) baffled construction, bringing D.I. water into each compartment at the bottom, (2) individual nitrogen inlets into each compartment improving scrubbing action and (3) various sizes to accommodate different sizes of carriers. D.I. water inlet accept 1/2-inch (12mm) diameter tubing. Nitrogen accepts 1/4" (6mm) diameter tubing.
- 2.19** D.I. and Nitrogen spray guns are constructed from MOLDED, not machined, Teflon. All internal wetted components are non-metal, assuring reduced contamination of the medium and a corrosion resistant gun. The lightweight comfortably hand fitted gun has a positive action shutoff - 80 psi (5.52 Bars) inlet pressure maximum. Inlet connection is 1/4" (6mm) NPT 8-foot clear PVC tubing with reinforcing filaments is included.
- 2.20** Exhaust alarm interlocks the operation of the Fume Hood with the exhaust blower for individually exhausted systems. The system monitors total flow and will not permit the Fume Hoods internal supply blower from energizing until the exhaust volume is sensed to be correct. Audible and visual alarms are provided.

3.0 Model and Features

The NU-156/E FumeGard Vertical Laminar Flow Wet Process Fume Hood is manufactured in four standard widths: 4 ft., 5 ft., 6 ft. and 8 ft., with two standard work surface depths: 26" or 32". (See also Specification Drawing BCD-05043.)




Dimensions	<u>NU-156-4 ft.</u>	<u>NU-156-5 ft.</u>	<u>NU-156-6 ft.</u>	<u>NU-156-8 ft.</u>
Overall Dimensions				
Width (W)	48 1/2"(1232mm)	60 1/2"(1536mm)	72 1/2"(1842mm)	96 1/2"(2451mm)
Depth (D) includes duct and light	35"/41" (889mm)/(1041mm)	35"/41" (889mm)/(1041mm)	35"/41" (889mm)/(1041mm)	35"/41" (889mm)/(1041mm)
Height (H) includes prefilter grill	66-5/8" (1692mm)	66-5/8" (1692mm)	66-5/8" (1692mm)	66-5/8" (1692mm)
Work Area Dimensions				
Width	38 1/2"(978mm)	50 1/2"(1283mm)	62 1/2"(1588mm)	86 1/2"(2197mm)
Depth	25 1/2"(648mm) OR: 31 1/2"(800mm)	25 1/2"(648mm) OR:31 1/2"(800mm)	25 1/2"(648mm) OR:31 1/2"(800mm)	25 1/2"(648mm) OR: 31 1/2"(800mm)
Height	29"(737mm)	29" (737mm)	29" (737mm)	29" (737mm)

3.1 Standard Features


- *HEPEX Zero Leak Airflow System
- *Standard HEPA Filter: Wood Frame Separatorless 99.99% Efficient on 0.3 Microns
- *External Fluorescent Lighting
- *Front Filter Removal
- *Sliding View Screen: Fully Closing to 20" Open
- *10-Inch (254mm) Work Access Opening at 100 LFPM (.51 m/s)
- *Removable Solid Work Surface With Front and Rear Perforated Grills
- *1/2-Inch Stress Relieved Seam Welded Polypropylene
- *PVC Diffuser Over Supply HEPA Filter
- *Spill Trough Plenum Under Work Surface
- *Flush Mounted Interior and Exterior Plumbing Access Panels
- *Plastic Motorized Impeller

3.2 Optional Features


- *Magnehelic Gauge: For Supply Pressure
- *Remote Controlled Polypropylene/PVDF Service Fixtures
- *Duplex Electrical Outlet, Externally or Internally Mounted
- *12" X 12" x 5" Polypropylene Sink With Strainer and "P" Trap
- *Ground Fault Circuit Interrupter
- *Polypropylene or PBF Kynar Hi-Purity Plumbing
- *Cascade Rinse Tanks, Single to Triple Tanks With Nitrogen Inlets For Improved Scrubbing Action
- *DI, N2 Teflon Spray Guns
- *Exhaust Monitor Alarm
- *Exhaust Blower Interlock With Alarm
- *Exhaust Transition 10" to 14" Round; 1/4-Inch Polypropylene
- *99.999% Efficient HEPA Filter on 0.12 Micron (ULPA)
- *Fully Perforated (10% Open) Work Surface
- *Vented Base Storage Cabinet

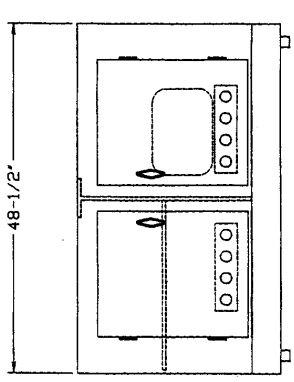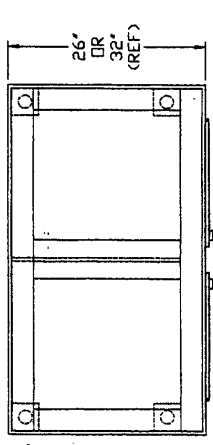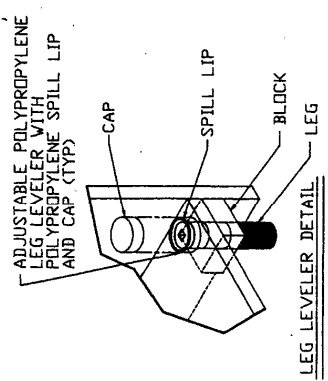


NU-55-424/430

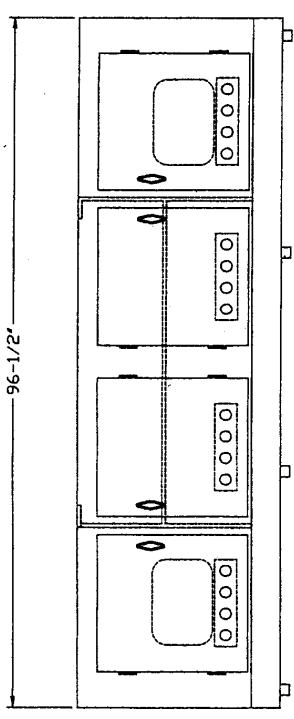


NU-55-824/830

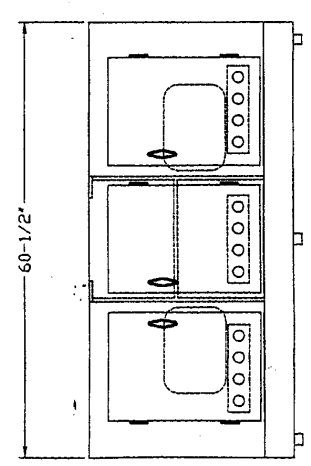

NU-55-524/530


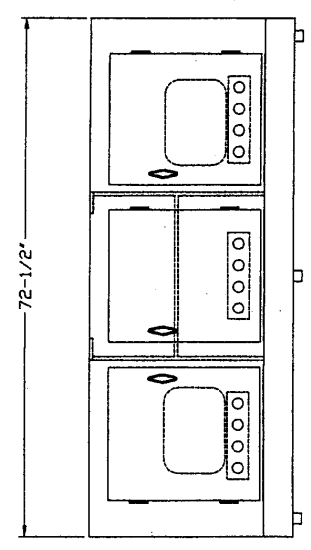


NU-55-624/630

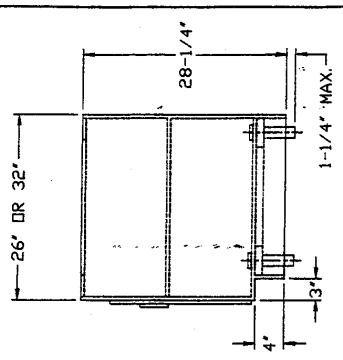

PLYMOUTH, MINNESOTA NU-55-4, 5, 6, & 8 FT POLYPROPYLENE FUME HOOD BASE	
DPTM MS 12/11/98 DRAWING NUMBER	SHEET 1 OF 1 BCD-05967

MODEL	DIM "A"	DIM "B"	DIM "D"	DIM "E"	DIM "F"	DIM "G"	DIM "H"	HEPA FILTER SIZE	CERTIF. VALUE	EXHAUST REQ'D	STATIC
NU-156-424	48-1/2"	31-1/2"	38-1/2"	24-3/4"	26"	10"	24"	24" X 36" X 6"	689 CFM	759 CFM	0.8" (20mm) w.g.
NU-156-430	48-1/2"	37-1/2"	38-1/2"	30-3/4"	32"	10"	24"	30" X 36" X 6"	785 CFM	863 CFM	0.8" (20mm) w.g.
NU-156-524	60-1/2"	31-1/2"	50-1/2"	24-3/4"	26"	10"	30"	24" X 48" X 6"	905 CFM	995 CFM	0.8" (20mm) w.g.
NU-156-530	60-1/2"	37-1/2"	50-1/2"	30-3/4"	32"	10"	30"	30" X 48" X 6"	1032 CFM	1133 CFM	0.8" (20mm) w.g.
NU-156-624	72-1/2"	31-1/2"	62-1/2"	24-3/4"	26"	12"	30"	24" X 60" X 6"	1120 CFM	1232 CFM	0.8" (20mm) w.g.
NU-156-630	72-1/2"	37-1/2"	62-1/2"	30-3/4"	32"	12"	30"	30" X 60" X 6"	1276 CFM	1402 CFM	0.8" (20mm) w.g.
NU-156-824	96-1/2"	31-1/2"	86-1/2"	24-3/4"	26"	14"	36"	24" X 84" X 6"	1550 CFM	1705 CFM	1.5" (38mm) w.g.
NU-156-830	96-1/2"	37-1/2"	86-1/2"	30-3/4"	32"	14"	36"	30" X 84" X 6"	1766 CFM	1941 CFM	1.5" (38mm) w.g.

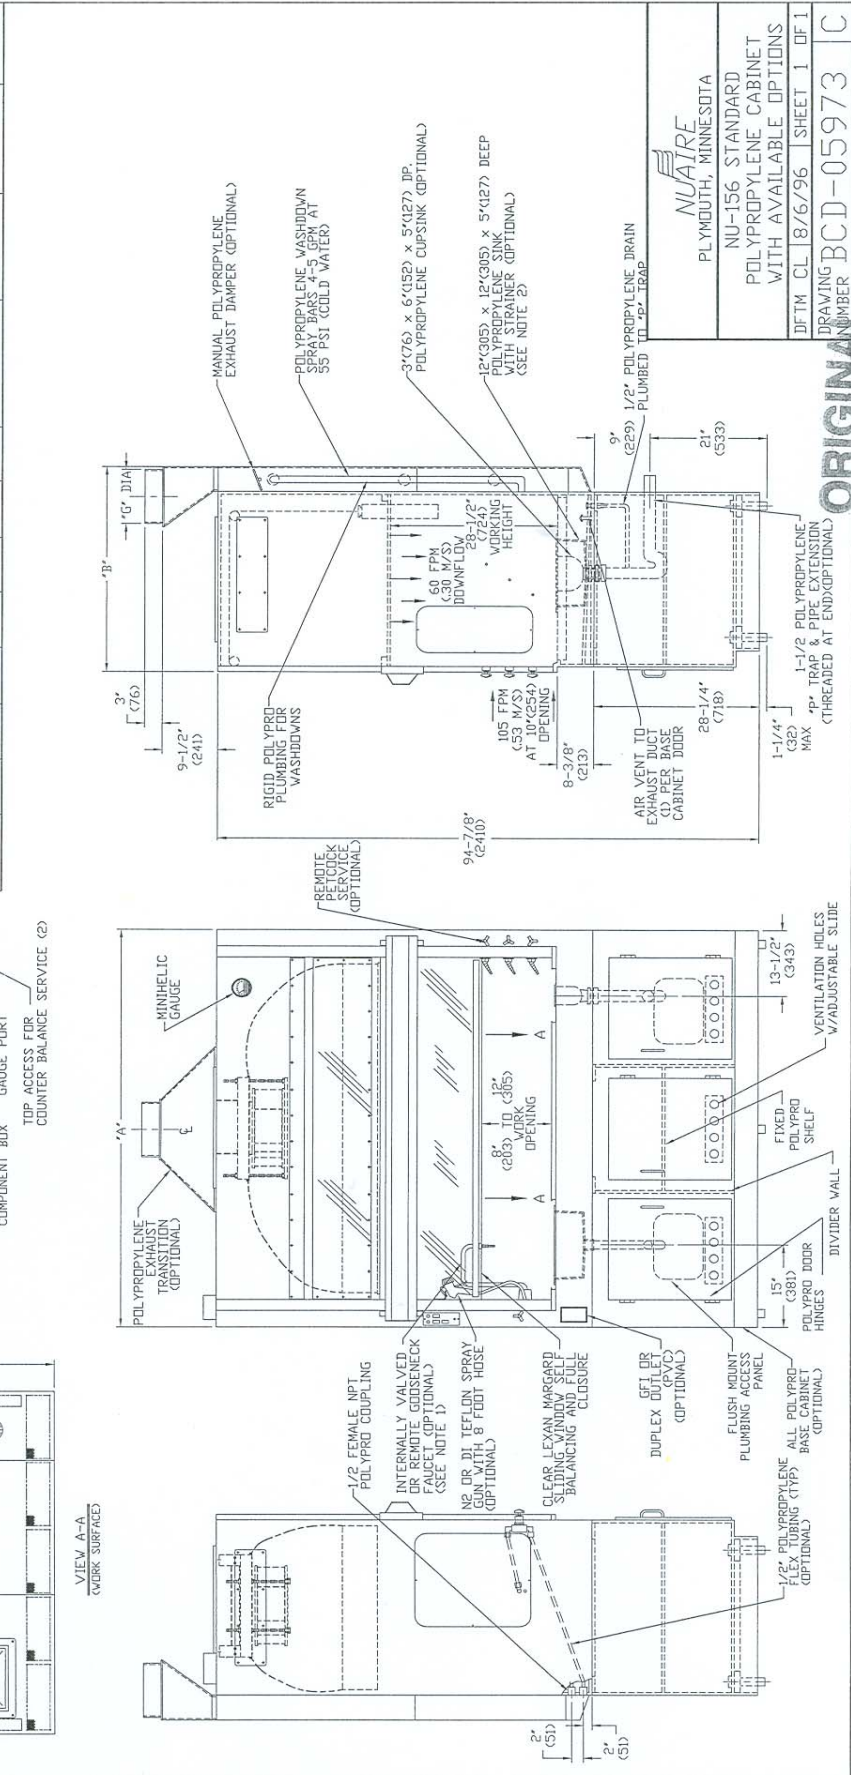
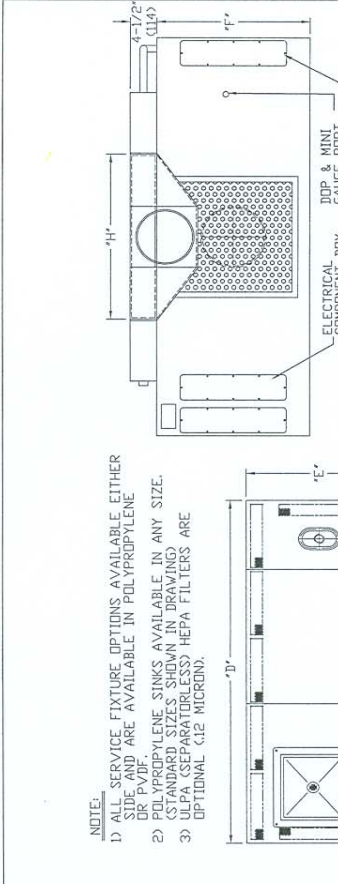


NUAIRE
 PLYMOUTH, MINNESOTA
 NU-156 STANDARD
 POLYPROPYLENE CABINET
 WITH AVAILABLE OPTIONS

DFTM CL 8/6/96 SHEET 1 OF 1
 DRAWING NUMBER BCD-05973 C

ORIGINAL

MODEL	DIM. "A"	DIM. "B"	DIM. "D"	DIM. "E"	DIM. "F"	DIM. "G"	DIM. "H"	HEPA FILTER SIZE	CERTIF. VALUE	EXHAUST REQ'D	STATIC W.G.
NU-156-424	48-1/2" (1232)	31-1/2" (800)	38-1/2" (978)	24-3/4" (629)	26" (660)	18" (454)	24" (609)	24" X 36" X 6" (609)X(914)X(152)	689 CFM (171 CHH)	759 CFM (1290 CHH)	0.8" (20mm) w.g.
NU-156-430	48-1/2" (1232)	37-1/2" (937)	38-1/2" (978)	30-3/4" (769)	32" (813)	10" (254)	24" (609)	30" X 36" X 6" (762)X(914)X(152)	785 CFM (1466 CHH)	863 CFM (1466 CHH)	0.8" (20mm) w.g.
NU-156-524	60-1/2" (1537)	31-1/2" (800)	50-1/2" (1283)	24-3/4" (629)	26" (660)	10" (254)	30" (762)	24" X 48" X 6" (609)X(1219)X(152)	905 CFM (1538 CHH)	995 CFM (1690 CHH)	0.8" (20mm) w.g.
NU-156-530	60-1/2" (1537)	37-1/2" (937)	50-1/2" (1283)	30-3/4" (769)	32" (813)	10" (254)	30" (762)	30" X 48" X 6" (762)X(1219)X(152)	1032 CFM (1753 CHH)	1133 CFM (1925 CHH)	0.8" (20mm) w.g.
NU-156-624	72-1/2" (1842)	31-1/2" (800)	62-1/2" (1588)	24-3/4" (629)	26" (660)	12" (305)	30" (762)	24" X 60" X 6" (609)X(1524)X(152)	1120 CFM (1903 CHH)	1232 CFM (2093 CHH)	0.8" (20mm) w.g.
NU-156-630	72-1/2" (1842)	37-1/2" (937)	62-1/2" (1588)	30-3/4" (769)	32" (813)	12" (305)	30" (762)	30" X 60" X 6" (762)X(1524)X(152)	1276 CFM (2168 CHH)	1402 CFM (2382 CHH)	0.8" (20mm) w.g.
NU-156-824	96-1/2" (2443)	31-1/2" (800)	86-1/2" (2197)	24-3/4" (629)	26" (660)	14" (356)	36" (914)	24" X 84" X 6" (609)X(2134)X(152)	1550 CFM (2633 CHH)	1705 CFM (2897 CHH)	1.5" (38mm) w.g.
NU-156-830	96-1/2" (2443)	37-1/2" (937)	86-1/2" (2197)	30-3/4" (769)	32" (813)	14" (356)	36" (914)	30" X 84" X 6" (762)X(2134)X(152)	1766 CFM (3000 CHH)	1941 CFM (3298 CHH)	1.5" (38mm) w.g.

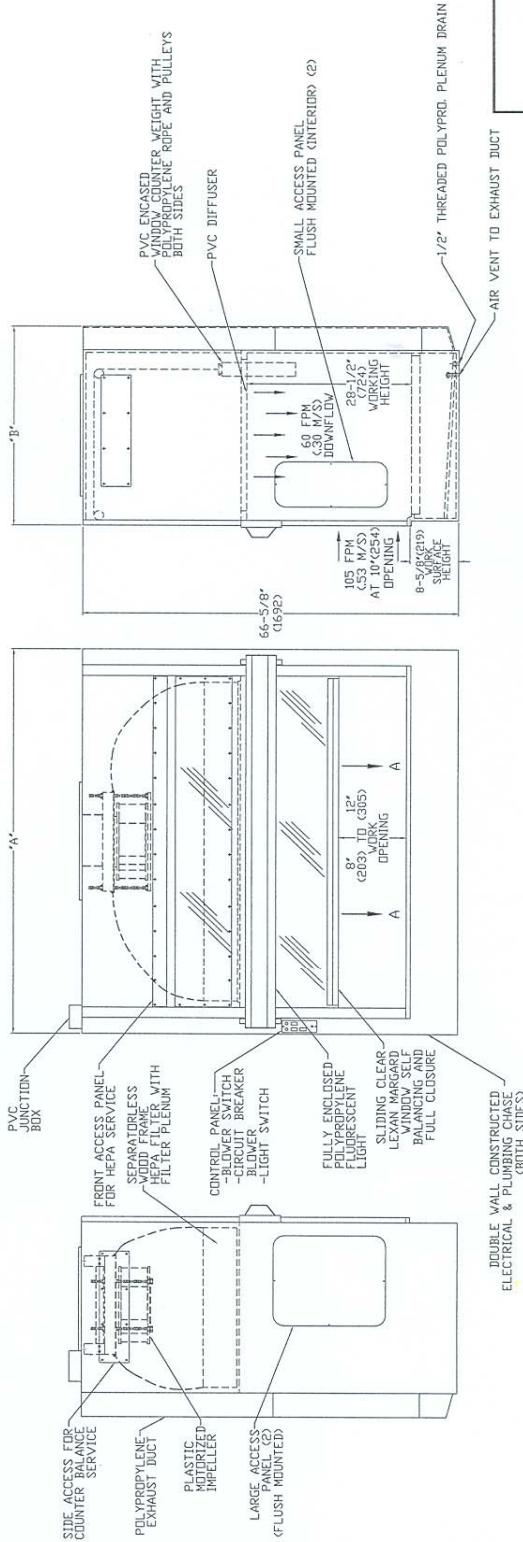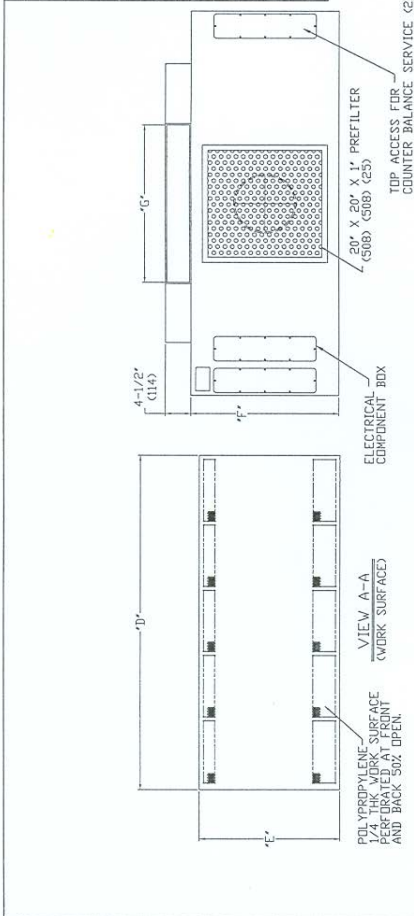

NOTE:

- PERSONNEL AND PRODUCT PROTECTION. (CLASS 10 FED. STD. 209D) FULLY AVAILABLE AT 8'-12" OPERATING WORK OPENING.
- THE WINDOW AND LIGHT ARE REMOVABLE.
- SUPPLY WOOD FRAME HEPA FILTER 99.99% (SEPARATORLESS)

NUVAIRE
PLYMOUTH, MINNESOTA

NU-156 STANDARD
POLYPROPYLENE
CABINET

DFTM CL 8/6/96 SHEET 1 OF 1
DRAWING BCD-05378 D

ORIGINAL

4.0 Warranty

NuAire, Inc. warrants that it will repair F.O.B. its factory or furnish without charge F.O.B. its factory a similar part to replace any material in its equipment within 12 months after the date of sale if proved to the satisfaction of the company to have been defective at the time it was sold provided that all parts claimed defective shall be returned, properly identified to the company at its factory, charges prepaid. Factory installed equipment or accessories are warranted only to the extent guaranteed by the original manufacturer, and this warranty shall not apply to any portion of the equipment modified by the user. Claims under this warranty should be directed to NuAire, Inc. setting forth in detail the nature of the defect, the date of the initial installation and the serial and model number of the equipment.

This warranty shall not apply to any NuAire product or part thereof which has been subject to misuse, abuse, accident, shipping damage, improper installation or service, or damage by fire, flood or acts of God. If the serial number of this product is altered, removed or defaced as to be illegible, the Warranty shall be null and void in its entirety.

The warranty is for the sole benefit of the original purchaser and is not assignable or transferable. Prior to returning any item, for any reason, contact NuAire for a Return Authorization Number. This number must accompany all returns. Any product shipped to NuAire without this number will be returned refused shipment or collect freight.

5.0 Shipments

NuAire takes every reasonable precaution to assure that your FumeGard Fume Hood arrives without damage. Motor carriers are carefully selected and shipping cartons have been specially designed to insure your purchase. However, damage can occur in any shipment and the following outlines the steps you should take on receipt of a NuAire FumeGard Fume Hood to be sure that if damage has occurred, the proper claims and actions are taken immediately.


5.1 Damaged Shipments

- 5.1.1** Terms are factory, unless stated otherwise. Therefore, it is important to check each shipment before acceptance.
- 5.1.2** If there is visible damage, the material can be accepted after the driver makes a notation on the consignee's copy of the freight bill. Then an inspection must be made to verify the claim against the carrier. This inspection is the basis of your filing the claim against the carrier.
- 5.1.3** If concealed damage is found it is absolutely necessary to NOTIFY THE FREIGHT AGENT AT ONCE and request an inspection. Without this inspection, the transportation company may not accept a claim for loss or damage. If the carrier will not perform the inspection, an affidavit must be prepared stating that he was contacted on a certain date and that he failed to comply with the request. This along with other papers in the customer's possession will support the claim.

6.0 Installation Instructions

6.1 Location

Within the laboratory, production process, etc., the ideal location for the FumeGard Fume Hood is away from personnel traffic lanes, air vents (in or out), doors and/or any other source of disruptive air currents.

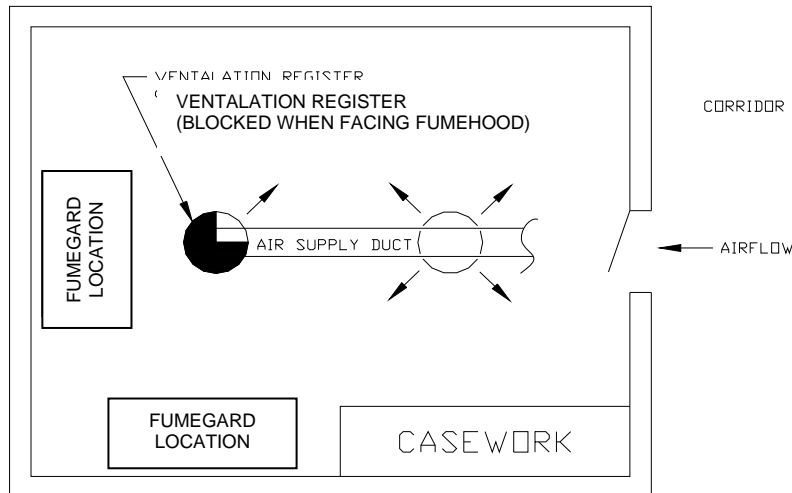

If drafts or other disruptive air currents exceed the intake velocity of the Fume Hood through the access opening, the potential exists for contaminated air to exit or enter the work surface area of the Fume Hood. It depends on the severity of the air current. Remember, the FumeGard Fume Hood is no substitute for good laboratory technique. Supply makeup air should be evenly diffused into the room at a rate not to exceed 75 LFPM (.38 m/s), and never “blasted” directly at the floor.

Where space permits, it is recommended to provide a clear 6-inch (152mm) area on each side of the Fume Hood for maintenance purposes.


The electrical outlet into which the Fume Hood is connected should be readily accessible for maintenance purposes. **Do not position the Fume Hood to prevent access to the power cord.** The power cord plug serves as the disconnect and should remain readily accessible. If the outlet is inaccessible, such as a conduit (hardwired) connection, then an appropriate warning label should be applied near the Fume Hoods on/off switch, to indicate the circuit breaker on the power distribution panel to be used.

More than any other type of Fume Hood, the NU-156/E requires careful site planning and preparation, due to the total exhaust nature of the Fume Hood. Proper sizing of the exhaust and supply systems are critical to the successful installation of the Fume Hood. In addition, the Fume Hood provides for the choice of makeup air for the supply (downflow air). The following are airflow requirements:


	<u>Supply Air</u>	<u>Inflow</u>	<u>Exhaust Air **</u>
NU-156-424/E	409 CFM (695 CMH)	280 CFM (476 CMH)	759 CFM (1291 CMH)*
NU-156-524/E	536 CFM (511 CMH)	369 CFM (627 CMH)	995 CFM (1690 CMH)*
NU-156-624/E	664 CFM (1128 CMH)	456 CFM (775 CMH)	1232 CFM (2093 CMH)*
NU-156-824/E	919 CFM (1561 CMH)	631 CFM (1072 CMH)	1705 CFM (2897 CMH)*
NU-156-430/E	505 CFM (858 CMH)	280 CFM (476 CMH)	863 CFM (1466 CMH)*
NU-156-530/E	663 CFM (1126 CMH)	369 CFM (627 CMH)	1133 CFM (1925 CMH)*
NU-156-630/E	820 CFM (1393 CMH)	456 CFM (775 CMH)	1402 CFM (2382 CMH)*
NU-156-830/E	1135 CFM (1928 CMH)	631 CFM (1072 CMH)	1941 CFM (3298 CMH)*

*CFM exhaust at 0.8 inches (20mm) w.g. negative measured at the rectangular exhaust duct of the Fume Hood for 4, 5 and 6 ft. Fume Hoods. CFM exhaust at 1.5 inches (38mm) w.g. negative measured at the rectangular exhaust duct of the Fume Hood for 8 ft. Fume Hoods.

****Concurrent Balance Value** is determined by a duct traverse measurement method taken a minimum of 7.5 duct diameters downstream of the direct connected LFBSC at its nominal setpoint calibrated using the primary DIM method and capture hood removed. These values shall be used for design and balance exhaust/supply HVAC requirements.

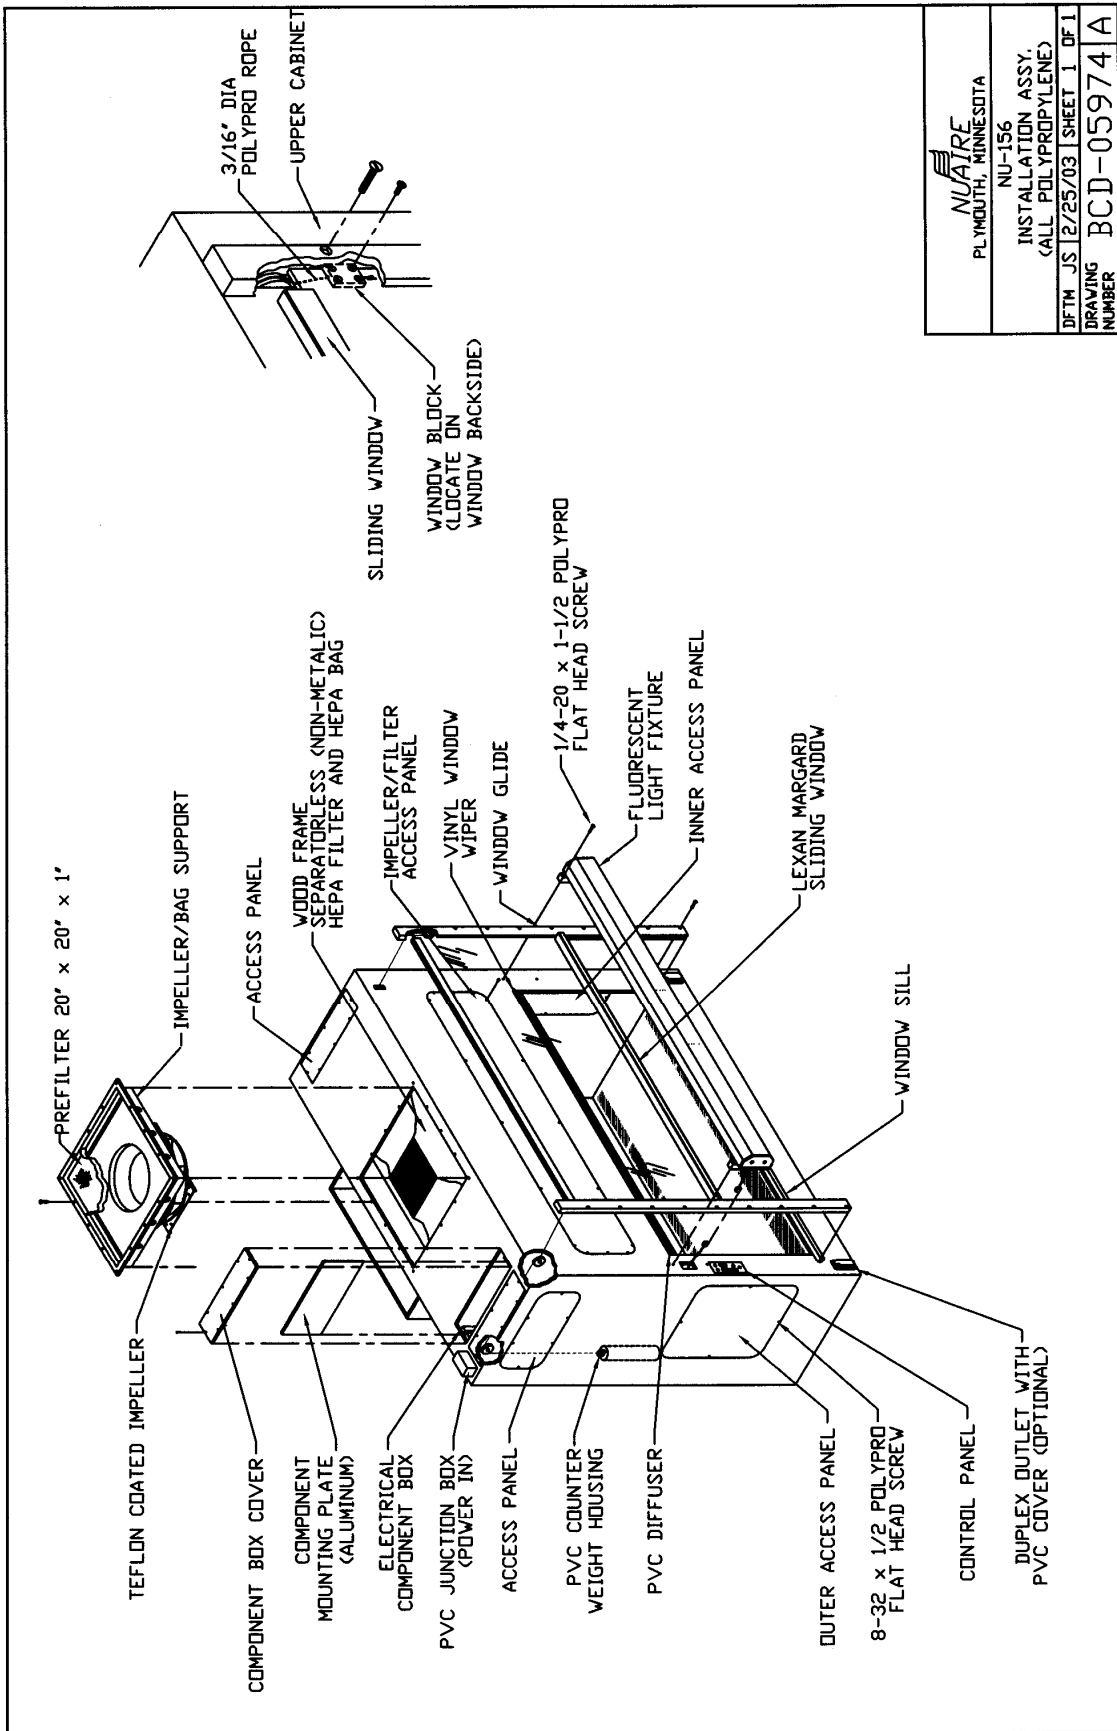

PLYMOUTH, MINNESOTA NU-156	INSTALLATION ASSY. (CALL POLYPROPYLENE)
DFTM JS 12/25/03 SHEET 1 OF 1 DRAWING NUMBER	BCD-05974 A

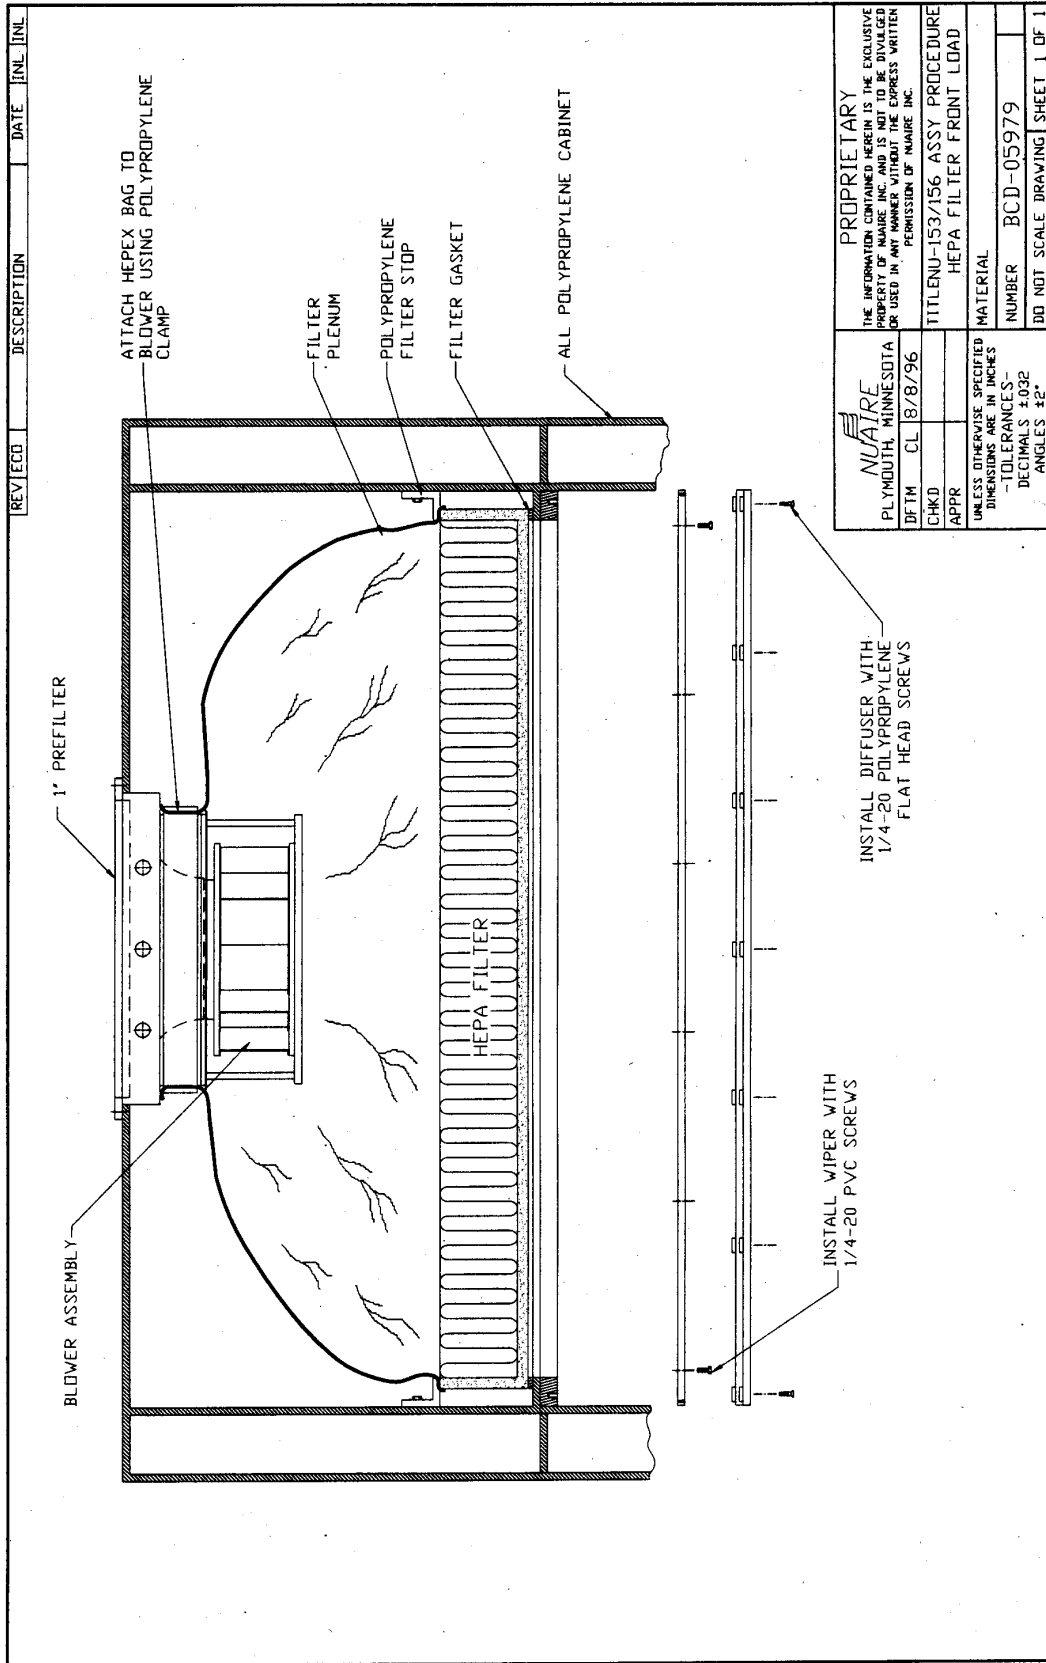

REV EGO	DESCRIPTION	DATE	INL INL
---------	-------------	------	---------

		PROPRIETARY THE INFORMATION CONTAINED HEREIN IS THE EXCLUSIVE PROPERTY OF NUAIRE, INC. AND IS NOT TO BE DIVULGED OR USED IN ANY MANNER WITHOUT THE EXPRESS WRITTEN PERMISSION OF NUAIRE, INC.	
PLYMOUTH, MINNESOTA	DFTM	CL	8/8/96
CHKD	APPR	TITLNU-153/156 ASSY PROCEDURE HEPA FILTER FRONT LOAD	
UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES -TOLERANCES- DECIMALS ±.032 ANGLES ±2°		MATERIAL NUMBER BCD-05979	
		DO NOT SCALE DRAWING SHEET 1 OF 1	

6.2 Set-Up Instructions

Remove outer shipping protection (carton or crating). The Fume Hood is fastened to the base skid and it is usually the best procedure to leave the skid in place until the Fume Hood is located in its approximate position to facilitate ease in handling. It can then be removed from the skid by removing the banding holding the Fume Hood to the skid.

6.2.1 Base Cabinet Assembly (BCD-05957)

The base cabinet is shipped on a separate skid if accompanied with the Fume Hood. Remove the banding holding the base cabinet to the base skid. Lift the base cabinet from the skid and place on the floor. Now lift the Fume Hood on top of the base cabinet and bolt the base cabinet to the Fume Hood using (4) 1/4-20 x 1-1/2" bolts and washers provided for the attachment process.

6.2.2 Leveling

Using a level placed on the work tray, adjust the leg levelers, first, end-to-end then front to back. The leg levelers located on the floor of the base cabinet are adjusted using a 3/8" drive socket and rotating to raise or lower as necessary.


6.2.3 Bench Installation

Place the Fume Hood on the bench. Using RTV caulk, seal all around the base of the Fume Hood and the bench. This provides a tight seal to prevent bench spills from migrating under the Fume Hood.

6.2.4 Electrical Services

The NU-156/E all Polypropylene Wet Process Fume Hood may be "hardwired" (optional) or plugged into an outlet with protective earthing connection with the standard power cord. The Fume Hood requires 115/230VAC, 50/60Hz single phase (correct rating varies per Fume Hood size, reference Electrical/Environmental Requirements).

It is recommended that power to the Fume Hood, whether hardwired or plug connected, be on its own branch circuit, protected with a circuit breaker at the distribution panel near the Fume Hood.

 **NOTE: THIS FUME HOOD CONTAINS ELECTRONIC BALLASTS FOR THE FLUORESCENT LIGHTING. ELECTRONIC BALLASTS OPERATE WITH HIGH INRUSH CURRENT. IT IS NOT RECOMMENDED TO USE THIS PRODUCT WITH GROUND FAULT CIRCUIT INTERRUPTERS (GFCI'S) BECAUSE THE BALLASTS MAY CAUSE THE GFCI TO TRIP.**

6.2.5 Plumbing Services

Remote controlled polypropylene needle-valve plumbing fixtures are provided within the side walls of the Fume Hood with control handles located external on the face of the Fume Hood. The type of service is specified by the colored-wall petcock (i.e. air, gas, Vacuum, nitrogen, etc.) Service outlets within the interior are designed for hose connections with ten serrations.

All plumbing services are plumbed within the right or left chase with 1/2 inch flexible polypropylene tubing and compression fittings. Water service plumbing lines are rated at a maximum of 60 PSI (4.5 Bars) as tested at NuAire before shipment. Air and gas lines are tested at a 90 PSI (6.75 Bars) maximum.

All plumbing terminates at the rear of the Fume Hood (for customer hook-up) with 1/2 inch female NPT polypropylene couplings.

All sinks are plumbed with 1 1/2 inch Polypropylene "P" trap and piping that exits out the rear of Fume Hood in the storage area. A rear access panel is provided for drain connection.

Connection to plant utilities should be made with proper materials for the individual service and according to national and/or local codes. It is not recommended that flammable gases be used in the Fume Hood unless flame retardant Polypropylene is purchased; however, if flammable gas is used, emergency shutoff valves should be located in an accessible area external to the Fume Hood. Observe all labels pertaining to the type of services and operating pressure.

6.2.6 Exhaust/Supply Duct Installation Guidelines

The exhaust/supply systems must provide conditions similar to that under which the Fume Hood was certified to meet its stated performance. The following guidelines should be observed when installing exhaust/supply air duct work of either existing plant exhaust systems, or a new exhaust system.

- 1) Adequate room air inflow to replace exhausted air. Air diffusion rate not to exceed velocity of 105 LFPM (.53 m/s).

MAKEUP AIR REQUIREMENTS

	<u>WITH SUPPLY DUCT</u>	<u>WITHOUT SUPPLY DUCT</u>
NU-156-424/E	280 CFM (476 CMH)	759 CFM (1290 CMH)
NU-156-524/E	369 CFM (627 CMH)	995 CFM (1690 CMH)
NU-156-624/E	456 CFM (775 CMH)	1232 CFM (2093 CMH)
NU-156-824/E	631 CFM (1072 CMH)	1705 CFM (2897 CMH)
NU-156-430/E	280 CFM (476 CMH)	863 CFM (1466 CMH)
NU-156-530/E	369 CFM (627 CMH)	1133 CFM (1925 CMH)
NU-156-630/E	456 CFM (775 CMH)	1402 CFM (2382 CMH)
NU-156-830/E	631 CFM (1072 CMH)	1941 CFM (3298 CMH)

- 2) Adequate plant exhaust system capability. The exhaust system is usually adequate if it can provide the rated exhaust flow at 1.0 inches water gauge negative.
- 3) Adequate supply air capability (if used). The supply air system is usually adequate if it can provide the rated supply air at 0.0 inches water gauge positive.
- 4) All duct losses must be considered in selecting the exhaust blower, for a new exhaust system (i.e. duct diameter, length and number of elbows.)
- 5) All duct work should be securely anchored to the building construction in a manner to be free from vibration and swaying under all conditions of operation.
- 6) Sheet metal gauges and seams should be in accordance with the current edition of the ASHRAE guide. A minimum of 24 gauge is required to prevent duct collapse due to high static pressure conditions, required.
- 7) All duct work should be maintained at a negative pressure within the building (i.e. externally located exhaust blower).
- 8) The exhaust blower and duct work should be a sealed system, properly vented to the atmosphere to disperse exhausted air.
- 9) The exhaust duct should be dampered. Dampers should be installed with a locking quadrant with markings to indicate damper position. A Polypropylene damper system is available and is located in the upper duct extension.

6.2.7 Final Assembly

The exterior surfaces and viewing window are easily cleaned with any mild household detergent using a soft cloth. Harsh chemicals, solvent-type cleansers and abrasive cleaners should not be used. Do not attempt to clean the HEPA filter media. Fume Hood interior walls or work surfaces are easily cleaned with any household detergent, using a soft cloth. The work surface is removable for access to the sloped drain plenum area for cleaning.

The interior should be thoroughly cleaned prior to use. A solution of 70% isopropyl alcohol is suitable.

6.3 Certification


After installation and prior to use, NuAire recommends that the Fume Hood be recertified to factory standards. At a minimum the following tests should be performed.

1. HEPA Leak Test
2. Downflow Velocity Test
3. Inflow Velocity Test
4. Airflow Smoke Patterns
5. Site Installation Assessment Tests

Of these tests, in order to insure that no disruptive air currents are penetrating the air inflow barrier smoke flow tests must be performed at a minimum (only biological testing/tracer gas can confirm containment). These tests must result in the containment of smoke passed around the perimeter of the work access opening, as well as no refluxing or drift of smoke within the interior of the Fume Hood.

It is recommended that these tests be performed by a qualified technician who is familiar with the methods and procedures for certifying laminar flow Fume Hoods.

After the initial certification, NuAire recommends that the Fume Hood be recertified at a minimum on an annual basis and after every filter change or maintenance action, or any time the operator feels it is necessary.

 **NOTE:** The Flowgard Fume Hoods, filters and seals provide premium performance. Quality control in both design and manufacturing insure superior reliability; however, protection to both product and operator is so vital that certification to the performance requirements should be accomplished as stated to insure personnel safety as established by the factory standards.

7.0 Operating the NU-156

7.1 Operator Controls and Indicators

The following is a description of the controls and indicators on the instrument control panel.

7.1.1 Blower Switch

The blower switch applies power to the internal blower when in the ON position.

7.1.2 Indicator Light

A green neon indicator light is located above the blower on/off switch and lights when power is applied to the blower. The lamp is rated for 20,000 hours continuous duty.

7.1.3 Circuit Breaker - Blower

The blower is protected with a circuit breaker. The circuit breaker in conjunction with the blower's thermal protector is designed to open under locked rotor or half-wave power conditions. Should the circuit breaker open (pop-out button will appear), merely press to reset. If the circuit breaker continually opens, a failure has occurred in the motor or solid-state speed controller. Consult a qualified repair technician or NuAire, Inc. for replacement.

7.1.4 Fluorescent/U.V. Light Switch (Optional UV Light)


This switch provides on/off control for the fluorescent light and/or the ultraviolet light (UV) if present (optional). With the UV light option, the switch provides for on center off/on operation so that both the fluorescent light and the UV light cannot be energized at the same time. When the UV light is on, proper care should be exercised.

7.1.5 Outlet Switch (Optional)

This switch provides on/off control for the line power available in the outlet within the interior of the Fume Hood or located in either outside sidewall of the base cabinet.

7.1.6 Circuit Breaker - Outlets (Optional)

The outlet located on the Fume Hood is protected with a separate circuit breaker. The circuit breaker may trip at 110% of load rating, but will trip at 145% of load rating in less than 2 hours. Should the circuit breaker open (pop-out button will appear), unplug the appliance plugged into the outlet and merely depress the pop-out button to reset.

 **NOTE:** If the outlet circuit breaker is not present in your model and the outlet circuit has been specifically wired as a separate circuit, the outlet rating is dependent on the branch circuit, circuit breaker at the power distribution panel.

7.1.7 Airflow Control

The operating downflow within the Fume Hood (i.e. 60 LFPM (.30 m/s) is controlled by a potentiometer located in the instrument control panel. The potentiometer controls the operating voltage applied to the blower. The potentiometer is adjustable over 270 degrees with a slotted screwdriver, which varies the applied voltage. **THIS ADJUSTMENT SHOULD ONLY BE MADE BY A QUALIFIED TECHNICIAN.**

7.1.8 Minihelic Gauge (Optional)

If the unit is equipped with a minihelic gauge, it will display the static pressure within the pressure plenum supplying the downflow HEPA filter. The gauge is calibrated in “inches of water gauge” pressure. As the HEPA filter loads with particulate matter, the amount of static pressure will increase, giving an indication of the “health” of the Fume Hood. From the initial pressure reading each 0.1” w.g. increment, the Fume Hood airflow should be checked by a qualified technician, unless certified on a yearly (or sooner) basis.

The minihelic gauge is optionally available and is mounted on the upper right front of the Fume Hood. The minihelic gauge is connected with PVC tubing to the filter plenum.

7.2 Operating Guidelines

The intent herein is to present general operational guidelines that will aid in the use of the Laminar Flow Wet Process Fume Hood to control airborne contaminants of low to moderate risk as stated in Technical Report No. FPS 5650000001 prepared by Dow Chemical U.S.A. for the National Cancer Institute.


7.2.1 Procedure protocols defined in terms of the barrier or control concepts unique to the NU-156 must be developed in order to obtain the maximum potential for safety and protection. The preplanning necessary to develop these protocols is based on several fundamental considerations, each of which will contribute to optimum benefits from the equipment:

- a. Minimize disruption of “air curtain”
- b. Minimize room activity
- c. Utilize unidirectional air flow
- d. Adequately diffused makeup air
- e. Minimize blockage of front/rear inlet grills
- f. Minimize overcrowding of work surface

7.2.2 Minimize Penetration of “Air Curtain”

The minimum number of items necessary should be placed into the Fume Hood to prevent overloading, but the work should also be planned to minimize the number of times an operator’s hands and arms must enter and leave the air curtain at the open face. The ideal situation is to have everything needed for the complete procedure placed in the hood before starting, so that nothing need pass in or out through the air barrier at the face until the procedure is completed. This is especially important in working with moderate risk agents.

Unnecessary raising of the hands inside the Fume Hood above the level of the work opening should be avoided. This presents an inclined plane from hands to elbows along which the downflow of air may run, to and possibly out, the open face. When withdrawing hands from the Fume Hood, never use horizontal sweeping movements. Always use motions parallel to the inflow velocity - straight in, straight out.

 **NOTE:** When working with agents of lower risk, it is not as important for all materials to be placed in the Fume Hood before starting, or for the procedure to be completely finished before materials are removed. Also, the time period for a unit of work may be continued over a more extended period during which entries and withdrawals from the Fume Hood may be made.

7.2.3 Minimize Room Activity

Activity in the room itself should be held to a minimum. Unnecessary activity may create disruptive air currents as well as interfere with the work of the operator. A person walking past the front of a Fume Hood can cause draft velocities up to 175 FPM (.89 m/s), which are sufficient to disrupt the air balance of the laminar flow unit.

7.2.4 Utilize Unidirectional Air Flow

The operator must keep two important facts in mind: (1) The air, as supplied to the work area through filters from the top, is contaminant free and (2) airborne contamination generated in the work area is controlled by the unidirectional flow of parallel air streams in a top-to-bottom direction.

A solid object placed in a laminar air stream will disrupt the parallel flow and consequently, the capability of controlling lateral movement of airborne particulates. A cone of turbulence extends below the object and laminarity of the air stream is not regained until a point is reached downstream, approximately equal to three to six times the diameter of the object. Within the parameters of this cone, particles may be carried laterally by multidirectional eddy currents.


7.2.5 Adequately Diffused Makeup Air must be employed in order to avoid disruptive air currents that will penetrate the work access opening, causing contaminated interior downflow air to escape or inflow air to penetrate the work surface, contaminating work in process. Makeup air must be diffused at no greater than 100 LFPM (.51 m/s) as measured 6 inches (152mm) below the diffuser. If this cannot be achieved, then makeup air must be supplied near the inlet air to the blower above the Fume Hood. Smoke flow tests, see Section 4.6, must result in all smoke being contained, with no refluxing or drift within the interior. On units with sinks, some drift of the interior downflow will be experienced near the sink, toward the center of the Fume Hood. These flow characteristics must be kept in mind when locating “clean” and “dirty” work in process.

7.2.6 Minimize Blockage of Front/Rear Inlet Grills

 
The personnel and product protection afforded by the NU-156 demands that the front and rear grills be kept free of all materials. The tests per NSF/ANSI 49 and ASHRAE110-1995 to determine the level of personnel and product protection are conducted with the grills unblocked.

Blocking the inlet grill will most assuredly result in a loss of personnel protection. Arms should be kept above the inlet grill (i.e. this is the reason for the one-inch airfoil lip). Lab coats should be tight fitting and not permit blocking of the suction inlet grill.

Blocking of the rear grill will alter the airflow pattern which could affect cross contamination of work in process. Excessive blocking of the rear grill will force more air toward the front grill which will lower the personnel protection afforded by the Fume Hood, permitting potentially contaminated downflow air to escape the work access opening.

 **NOTE:** With a fully perforated work surface it is not as important to concern oneself with blocking airflow patterns created by the rear grill. Overcrowding the work surface should be avoided, however, since the perforated work surface does not have a defined rear grill.

8.0 General Maintenance



All maintenance actions on this equipment must be performed by a qualified technician who is familiar with the proper maintenance procedures required for this equipment. This include both certification as well as repair.

Normally no preventive maintenance is required on the interior of the Fume Hood (i.e. the area behind the access panels containing the HEPA filters and blower assembly). All required adjustments in order to maintain proper Fume Hood airflows are external to the Fume Hood interior. The blower is lubricated for life and is thermally protected with automatic reset.

The prefilter replacement interval depends on the contaminant (large particles or lint) in the room - a typical period is every three months. NuAire does, however, recommend that the FumeGard have the integrity of the HEPA filters verified by a qualified technician after the unit has been initially installed. Thereafter, certification should be performed on an annual basis, or whenever the operator has reason to believe it necessary, especially if the Fume Hood has been moved to a new location, or the magnehelic gauge has increased by 0.1" w.g. (2.5mm w.g.).

8.1 Fluorescent Lamp Replacement

Two fluorescent slimline lamps are sealed external to the Fume Hood to aid maintenance and minimize heat buildup within the Fume Hood. The life rating of the lamp is 9000 hours based on three-hour burning cycles.

To replace a lamp it is necessary to remove the lamp fixture assembly.

1. First, switch Fume Hood light switch off and remove the four front flat head screws.
2. With the help of another person to support the fixture, disconnect the fixture connector on the left end so the entire fixture can be laid on a bench. The bulbs are sealed behind a 1/8 inch (3mm) thick Lexan cover. Remove the 1/4-20 screws that secure the cover to the fixture.
3. After the bulbs are replaced reverse the procedure for assembly.
4. When replacing the light fixture, be sure to tuck the electrical wiring back into the holes (i.e. Fume Hood interior), preventing unsightly wires from being exposed.

8.2 Supply Filter/Motor Replacement

The supply HEPA filter under normal usage and barring an accident (a puncture) do not need replacement until the supply volume cannot be maintained. This may permit the supply average velocity to be as low as 55 LFPM (.28 m/s), as long as no point falls below 20 percent of the average.

The supply filter for the FumeGard employs NuAire's HEPEX system.


8.2.1 Supply Filter Replacement (Drawing BCD-05979)



Disconnect electrical power from the unit before attempting any maintenance action.

Step 1: Remove the front access panel on upper Fume Hood to gain access to the HEPA filter and blower plenum connection.

Step 2: Remove the Polypropylene band clamp holding the flexible plenum to the blower assembly.

 **NOTE:** The blower assembly has been gasketed with double sticky back gasket which must be replaced when installing a new filter.

Step 3: For ease of filter removal, remove the diffuser from inside the work zone. Remove the Polypropylene 1/4 - 20 flat head screws holding the diffuser in place. The diffuser also houses the vinyl wiper for the window, which does not require removal.

Step 4: Before removing the HEPA filter, remove filter stops holding down the filter. It is the best procedure to use two people to remove and replace the HEPA filter. Note that the filter is cradled in sponge rubber and may require gentle tugging to gain release.

Step 5: To install the supply HEPA filter, simply reverse the procedure outlines in the steps above.

8.2.2 Blower Removal

Step 1: Disconnect electrical connections to the blower. A four-pin quick disconnect connector has been provided for this purpose. It is recommended that the blower be removed as a single unit mounted on the subassembly plate. Remove the (4) 1/4-20 x 1/2 bolts under the subassembly plate that connects with the Teflon coated support posts. The plate and blower can be removed through the front access panel.

Step 2: Replace the blower exactly as originally installed, paying particular attention to the correct electrical connections, see electrical schematic.

The following color coding has been established by NuAire:

<u>Wire #</u>	<u>Definition</u>	<u>Color Code</u>
1	Neutral	White
2	Hot (To Triac)	Black
5	Capacitor	Brown

8.3 Airflow Adjustments

The NU-156 airflow calibration consists of internal and external adjustments to balance the airflow within the Fume Hood and the calibration of the airflow monitor probes. **THIS WORK SHOULD BE DONE ONLY BY A QUALIFIED TECHNICIAN WHO CAN MEASURE THE AIRFLOW FROM THE FILTERS WITH A SUITABLE VELOMETER.** NuAire provides one internal adjustment to balance the supply airflow within the Fume Hood. This is:

- a. Blower speed adjustment via control system.

The blower speed control system adjusts the Fume Hood's supply volume of airflow while the customer supplied exhaust system controls the exhaust volume of airflow. Since it has been NuAire's experience that the filters may not "load" evenly, both adjustments are necessary for proper Fume Hood performance.

The Fume Hood is considered to be certifiable if the following airflow measurements are present:

- a. Downflow average: 60 LFPM \pm 5 LFPM (.30 m/s \pm .025 m/s).
- b. Inflow average: 105 LFPM \pm 5 LFPM (.53 m/s \pm .025 m/s) using the direct inflow measurement method or related value using the inflow velocity measurement method.

The following procedure should be used to measure the Fume Hood flow, in the order specified in the subsequent sections.


8.3.1 Determine Total Flow

The first step is to determine the total flow available to the Fume Hood, in order to evaluate the proper installation (capability of the exhaust system.) The exhaust system is adequate if it can provide the required static pressure at the Fume Hood's rated maximum flow.

The total flow measurement procedure can be found in Table 9.1. If necessary, adjust the exhaust system to achieve the correct exhaust volume. Use Table 9.0 to relate downflow and inflow volumes and corresponding average airflow velocities. Note the internal motor/blower is turned off during the total flow measurement.

8.3.2 Determine Downflow Average

The procedure for determining the downflow volume and average velocity (both quantities will have to be determined) is shown in Table 9.1, Item A. NuAire provides one adjustment to balance the downflow within the Fume Hood, the motor speed adjustment (see Section 8.1.7). The downflow is considered to be certifiable if the following measurements are present.

 **NOTE:** NuAire employs a permanent split capacitor motorized blower which, due to its physical properties, will automatically increase RPM as the applied load to the blower increases (i.e. the static pressure increases due to HEPA filter loading.) This results in the capacity to automatically handle a 60 percent increase in static pressure across the HEPA filter with no more than 10% drop in total flow (CFM). Therefore only a moderate motor speed adjustment may be required on an annual certification basis.

8.3.3 Determine Work Access Inflow Velocity Average

Table 9.0 illustrates the acceptable ranges of air flow for the Fume Hood. The Inflow Velocity Average is calculated by subtracting the downflow volume from the total volume and dividing by the work access open area. It must fall within the range indicated in Table 9.0.

8.4 Filter Integrity Checks

In order to check filter and filter seal integrity, the HEPA filter media and seals must be directly accessible by measuring instrument. The challenge material (i.e. PAO) should be supplied over the supply inlet for the supply filter and in the rear center of the workzone over the intake slots for the exhaust filter. The upstream challenge port is located on top of the Fume Hood.

A PVC diffuser plate, placed below the supply HEPA to protect the filter during normal usage as well as diffuse (even out) the downflow, may be removed as follows.

The PVC diffuser is secured to the Fume Hood top by 1/4 - 20 flat head Polypropylene screws located immediately behind the front viewing window and along the rear and sidewalls. After removing the screws, lower the diffuser and remove from work zone. Note that the diffuser has fixed spacers to allow clean air to feed down along side walls, back and front window to force any stagnant particles through the perforated grills and out the exhaust duct. Also note the front of the diffuser sandwiches a vinyl window wiper to contain air leakage above the diffuser.

Once the HEPA filter media and seals are exposed, the media and seals are scanned with a photometer at a traverse rate no greater than 10 ft. per minute for leaks not to exceed 0.01% of upstream (challenged) concentration.

**TABLE 8.0
CERTIFICATION VALUES**

The following are recommended minimum/maximum Fume Hood airflow setpoints in order to maintain the Hood Performance rating for personnel protection. NuAire recommends, however, operation at the stated average flow for ease of maintenance and annual certification.

<u>Parameter</u>	<u>Minimum Acceptable Flow</u>	<u>Stated Average Flow</u>	<u>Maximum Acceptable Flow</u>
<u>NU-156-424</u>			
1. Inflow Avg. Velocity	100 FPM (.51 m/s)	105 FPM (.53 m/s)	110 FPM (.56 m/s)
2. Inflow Volume	270 CFM (459 CMH)	280 CFM (476 CMH)	294 CFM (500 CMH)
3. Down Avg. Velocity	55 FPM (.28 m/s)	60 FPM (.30 m/s)	65 FPM (.33 m/s)
4. Down Volume	375 CFM (637 CMH)	409 CFM (695 CMH)	443 CFM (753 CMH)
5. Total Volume	645 CFM (1095 CMH)	689 CFM (1171 CMH)	737 CFM (1252 CMH)
<u>NU-156-524</u>			
1. Inflow Avg. Velocity	100 FPM (.51 m/s)	105 FPM (.53 m/s)	110 FPM (.56 m/s)
2. Inflow Volume	355 CFM (603 CMH)	369 CFM (627 CMH)	386 CFM (656 CMH)
3. Down Avg. Velocity	55 FPM (.28 m/s)	60 FPM (.30 m/s)	65 FPM (.33 m/s)
4. Down Volume	491 CFM (834 CMH)	536 CFM (911 CMH)	581 CFM (987 CMH)
5. Total Volume	846 CFM (1437 CMH)	905 CFM (1538 CMH)	967 CFM (1643 CMH)
<u>NU-156-624</u>			
1. Inflow Avg. Velocity	100 FPM (.51 m/s)	105 FPM (.53 m/s)	110 FPM (.56 m/s)
2. Inflow Volume	435 CFM (739 CMH)	456 CFM (775 CMH)	477 CFM (810 CMH)
3. Down Avg. Velocity	55 FPM (.28 m/s)	60 FPM (.30 m/s)	65 FPM (.33 m/s)
4. Down Volume	609 CFM (1035 CMH)	664 CFM (1128 CMH)	720 CFM (1223 CMH)
5. Total Volume	1044 CFM (1774 CMH)	1120 CFM (1903 CMH)	1197 CFM (2034 CMH)
<u>NU-156-824</u>			
1. Inflow Avg. Velocity	100 FPM (.51 m/s)	105 FPM (.53 m/s)	110 FPM (.56 m/s)
2. Inflow Volume	605 CFM (1028 CMH)	631 CFM (1072 CMH)	661 CFM (1123 CMH)
3. Down Avg. Velocity	55 FPM (.28 m/s)	60 FPM (.30 m/s)	65 FPM (.33 m/s)
4. Down Volume	843 CFM (1432 CMH)	919 CFM (1561 CMH)	996 CFM (1692 CMH)
5. Total Volume	1448 CFM (2460 CMH)	1550 CFM (2633 CMH)	1657 CFM (2815 CMH)

<u>Parameter</u>	<u>Minimum Acceptable Flow</u>	<u>Stated Average Flow</u>	<u>Maximum Acceptable Flow</u>
<u>NU-156-430</u>			
1. Inflow Avg. Velocity	100 FPM (.51 m/s)	105 FPM (.53 m/s)	110 FPM (.56 m/s)
2. Inflow Volume	270 CFM (459 CMH)	280 CFM (476 CMH)	294 CFM (500 CMH)
3. Down Avg. Velocity	55 FPM (.28 m/s)	60 FPM (.30 m/s)	65 FPM (.33 m/s)
4. Down Volume	463 CFM (787 CMH)	505 CFM (858 CMH)	547 CFM (929 CMH)
5. Total Volume	733 CFM (1245 CMH)	785 CFM (1334 CMH)	841 CFM (1429 CMH)
<u>NU-156-530</u>			
1. Inflow Avg. Velocity	100 FPM (.51 m/s)	105 FPM (.53 m/s)	110 FPM (.56 m/s)
2. Inflow Volume	355 CFM (603 CMH)	369 CFM (627 CMH)	386 CFM (656 CMH)
3. Down Avg. Velocity	55 FPM (.28 m/s)	60 FPM (.30 m/s)	65 FPM (.33 m/s)
4. Down Volume	608 CFM (1033 CMH)	663 CFM (1126 CMH)	718 CFM (1220 CMH)
5. Total Volume	959 CFM (1629 CMH)	1032 CFM (1753 CMH)	1104 CFM (1876 CMH)
<u>NU-156-630</u>			
1. Inflow Avg. Velocity	100 FPM (.51 m/s)	105 FPM (.53 m/s)	110 FPM (.56 m/s)
2. Inflow Volume	435 CFM (739 CMH)	456 CFM (775 CMH)	477 CFM (810 CMH)
3. Down Avg. Velocity	55 FPM (.28 m/s)	60 FPM (.30 m/s)	65 FPM (.33 m/s)
4. Down Volume	752 CFM (1278 CMH)	820 CFM (1393 CMH)	889 CFM (1510 CMH)
5. Total Volume	1187 CFM (2017 CMH)	1276 CFM (2168 CMH)	1366 CFM (2321 CMH)
<u>NU-156-830</u>			
1. Inflow Avg. Velocity	100 FPM (.51 m/s)	105 FPM (.53 m/s)	110 FPM (.56 m/s)
2. Inflow Volume	605 CFM (1028 CMH)	631 CFM (1072 CMH)	661 CFM (1123 CMH)
3. Down Avg. Velocity	55 FPM (.28 m/s)	60 FPM (.30 m/s)	65 FPM (.33 m/s)
4. Down Volume	1041 CFM (1769 CMH)	1135 CFM (1928 CMH)	1230 CFM (2090 CMH)
5. Total Volume	1646 CFM (2797 CMH)	1766 CFM (3000 CMH)	1891 CFM (3213 CMH)

TABLE 8.1

Recommended Measurement Methods for Fume Hood Downflow & Inflow.

A. Downflow Measurement

The downflow velocity is measured on a grid scale in a horizontal plane defined by the bottom edge of the viewing window. Readings taken at least six inches (152mm) from perimeter walls.

Downflow Velocity Profile (applicable on all units)

A. Instruments: TSI 8355 Thermoanemometer

B. Procedure: Supply filter efflux is measured on a grid, in a horizontal plane defined by the bottom edge of the window. No reading should be taken closer than 6 inches (152mm) from the inside perimeter.

C. Test Data - Inches (mm):

400/E	6 (152)	11.300 (287)	16.60 (422)	21.90 (556)	27.200 (691)	32.500 (826)								
500/E	6 (152)	11.500 (292)	17.000 (432)	22.500 (572)	28.000 (711)	33.500 (851)	39.000 (991)	44.500 (1130)						
600/E	6 (152)	11.610 (295)	17.220 (437)	22.830 (580)	28.440 (722)	34.060 (865)	39.670 (1008)	45.280 (1150)	50.890 (1293)	56.500 (1435)				
800/E	6 (152)	11.731 (298)	17.461 (443)	23.192 (589)	28.923 (735)	34.653 (880)	40.385 (1025)	46.115 (1171)	51.846 (1317)	57.577 (1462)	63.307 (1608)	69.038 (1754)	74.769 (1899)	80.500 (2045)
	6 (152)													
	11 (279)													
	16 (406)													
	21 (533)													
	26 (660)													

Number of Readings:	Average Velocity	ft./min. (m/s)
---------------------	------------------	----------------

D. Acceptance Criteria:

1. Average downflow velocity = 55 to 65 fpm (.30 to .33 m/s)

E. Meets Acceptance Criteria: Yes _____ No _____

B. Inflow Measurement

a. Primary Procedure:

The primary procedure to determine inflow velocity uses a Direct Inflow Measurement (DIM) Instrument (i.e. Shortridge Flowhood). The DIM Instrument can be used directly on the Fume Hood with NO CORRECTION FACTORS REQUIRED. The DIM Instrument should be equipped with a flowhood that is as close as possible to the width of the Fume Hood (i.e. NU-156-424 should use 1 x 4 foot flowhood). The DIM Instrument should also be duct taped to the Fume Hood to prevent any sneak air paths from occurring. The Fume Hood supply duct connection should also be blocked off to assure all airflow is directed through the window access opening.

The DIM Instrument will read exhaust volume (i.e. CFM). Use Tables 9.0 and 9.1 to calculate inflow velocity.

b. Alternate Procedure:

The alternate procedure to determine inflow velocity is as follows. The inflow velocity is measured on a grid scale in the plane of the access opening. Readings taken at least 4 inches (102mm) from sides of window access opening and in to rows at 25% and 75% of the access opening height. Also, the front grill should be removed and the work tray inverted and placed at the front of the work zone. So, the exhaust airflow will be taken from the rear of the work zone, thus producing a more laminar airflow through the window access opening.

400/E	4 (102)	7.812 (198)	11.625 (295)	15.438 (392)	19.250 (489)	23.062 (586)	26.875 (683)	30.688 (779)	34.5 (876)			
500/E	4 (102)	7.863 (200)	11.725 (298)	15.589 (396)	19.450 (494)	23.312 (592)	27.175 (690)	31.038 (788)	34.901 (886)	38.764 (985)	42.625 (1083)	46.500 (1181)
600/E	4 (102)	7.893 (200)	11.786 (299)	15.679 (398)	19.572 (497)	23.465 (596)	27.358 (695)	31.250 (794)	35.144 (893)	39.037 (992)	42.930 (1090)	46.823 (1189)
800/E	4 (102)	7.925 (201)	11.850 (301)	15.775 (401)	19.700 (500)	23.625 (600)	27.550 (700)	31.475 (800)	35.400 (900)	39.325 (998)	43.250 (1098)	47.175 (1198)
2.5												
7.5												


600/E (CONT)	50.716 (1288)	54.609 (1387)	58.500 (1486)						
800/E (CONT)	51.100 (1298)	55.025 (1398)	58.950 (1497)	62.875 (1597)	66.800 (1697)	70.725 (1796)	74.650 (1896)	78.575 (1996)	82.5 (2096)
2.5 (CONT)									
7.5 (CONT)									

TABLE 8.1 CONTINUED

c. Work Access Inflow Velocity

The horizontal vector of the inflow velocity (perpendicular to the access opening) is calculated as follows:

$$\text{Air Barrier Velocity} = \frac{\text{Exhaust CFM} - \text{downflow CFM}}{\text{Work Access Opening (sq. ft.)}}$$

 NOTE: The downflow CFM equals the work zone cross-sectional area times the average downflow velocity.

Pertinent Areas for Calculation

	Work Zone Cross-Sectional Area	Work Access Opening Area (10-Inch)
NU-156-424/E	6.82 sq ft (.633 m ²)	2.67 sq ft (.248 m ²)
NU-156-524/E	8.94 sq ft (.830 m ²)	3.51 sq ft (.326 m ²)
NU-156-624/E	11.07 sq ft (1.028 m ²)	4.34 sq ft (.403 m ²)
NU-156-824/E	15.32 sq ft (1.423 m ²)	6.01 sq ft (.558 m ²)
NU-156-430/E	8.42 sq ft (.782 m ²)	2.67 sq ft (.248 m ²)
NU-156-530/E	11.05 sq ft (1.026 m ²)	3.51 sq ft (.326 m ²)
NU-156-630/E	13.67 sq ft (1.269 m ²)	4.34 sq ft (.403 m ²)
NU-156-830/E	18.92 sq ft (1.757 m ²)	6.01 sq ft (.558 m ²)

9.0 Electrical/Environmental Requirements

9.1 Electrical (Supply Voltage Fluctuations not to Exceed +/- 10%)

NU-156-424/430	115 VAC,	60 Hz,	1 Phase,	4 Amps
NU-156-524/530	115 VAC,	60 Hz,	1 Phase,	6 Amps
NU-156-624/630	115 VAC,	60 Hz,	1 Phase,	6 Amps
NU-156-824/830	115 VAC,	60 Hz,	1 Phase,	12 Amps
*NU-156-424E/430E	230 VAC,	50 Hz,	1 Phase,	5 Amps
*NU-156-524E/530E	230 VAC,	50 Hz,	1 Phase,	5 Amps
*NU-156-624E/630E	230 VAC,	50 Hz,	1 Phase,	5 Amps
*NU-156-824E/830E	230 VAC,	50 Hz,	1 Phase,	6 Amps

* CE Certified

9.2 Operational Performance (for indoor use only)

Environment Temperature Range:	60°F-85°F (15°C - 30°C)
Environment Humidity:	20% - 60% Relative Humidity
Environment Altitude:	6562 Feet (2000M)

9.3 Light Exposure

Standard Fluorescent Lighting @ 150 ft. candles (1614 LUX) maximum intensity.

9.4 Installation Category: 2.0

Installation category (overvoltage category) defines the level of transient overvoltage, which the instrument is designed to withstand safely. It depends on the nature of the electricity supply and its overvoltage protection means. For example, in CAT II, which is the category used for instruments in installations supplied from a supply comparable to public mains such as hospital and research laboratories and most industrial laboratories, the expected transient overvoltage is 2500 V for a 230 V supply and 1500 V for a 120 V supply.

9.5 Pollution Degree: 2.0

Pollution degree describes the amount of conductive pollution present in the operating environment. Pollution degree 2 assumes that normally only non-conductive pollution such as dust occurs with the exception of occasional conductivity caused by condensation.

9.6 EMC Performance (classified for light industrial)

Emissions:	EN61326
Immunity:	EN61326



Class A equipment is intended for use in an industrial environment. In the documentation for the user, a statement shall be included drawing attention to the fact that there may be potential difficulties in ensuring electromagnetic compatibility in other environments, due to conducted as well as radiated disturbances.

10.0 Optional Equipment

10.1 Ground Fault Interrupter

The duplex outlet may be wired with a Ground Fault Interrupting circuit (GFI). The GFI sensor detects a “leakage” of five milliamperes or greater between power and ground and interrupts current flow in 1/40 of a second; fast enough to prevent injury to personnel.

The GFI duplex contains a “reset” button that pops out, showing a red line which indicates that power to the protected circuit has been discontinued. The GFI circuit should be tested at least once a month for maximum protection against electrical shock hazard.

- To Test:
1. Push “test” button. The “reset” button should pop up, showing a red line which indicates that power to the protected circuit has been discontinued. The GFI circuit should be tested at least once a month for maximum protection against electrical shock hazard.
 2. If the “reset” button does not pop up when the test button is pushed, a loss of ground fault protection is indicated. Do not use, call a qualified electrician.
 3. To restore power, push the “reset” button.

The GFI is so dependable that the FumeGard can be used to verify the integrity of electrical circuitry in any appliance simply by plugging it into a FumeGard electrical outlet.

Each GFI is thoroughly tested prior to shipment.

11.0 Disposal and Recycle

Cabinets that are no longer in use and are ready for disposal contain reusable materials. ALL components with the exception of the HEPA filters may be disposed and/or recycled after they are known to be properly disinfected.

 
☞ **NOTE:** Follow all local, state and federal guidelines for disposal of HEPA filter solid waste.



BIOHAZARD



Chemical Hazard



Prior to any disassembly for disposal, the cabinet must be decontaminated.



RECYCLE



LEAD FREE

Component

Base Cabinet
 Window
 Supply Diffuser
 Hepex Bag
 Blower Wheel & Housing
 Motor
 Printed Wiring Assembly
 Wire
 Ballasts
 Armrest
 Connectors
 Hardware

Material

Polypropylene
 Polycarbonate
 PVC
 PVC
 Steel/PVC
 Various Steel/Copper
 Lead Free Electronic
 PVC Coated Copper
 Various Steel, Electronic
 Polypropylene
 Nylon
 Teflon Coated Stainless Steel and Steel

☞ **NOTE:** Material type can be verified with use of a magnet with stainless and aluminum being non-magnetic.

12.0 Polypropylene

NuAire products manufactured from Polypropylene materials require special consideration for the care and use to assure maximum customer satisfaction. Polypropylene materials have many favorable characteristics, such as being resistant to many chemicals, rigid, durable, and available in many thicknesses. NuAire fabricates the Polypropylene materials in many different ways to produce a variety of products for the laboratory. Understanding about the care and use of the Polypropylene material is important.

12.1 Cleaning

Regular cleaning can be done with soap and water, any commercial window glass cleaner, or Alcohol Acetone for stubborn areas. Use a soft cloth or damp paper towel. Abrasive material, such as scrubbers, will scratch the surface. The following brand name cleaners have been found to work well with Polypropylene materials.

Fantastik household cleaner
Glass Plus cleaner
Formula 409 household cleaner
LPS Resolve Cleaner

If an external surface static charge develops, spraying an anti-static solution on the effected area will eliminate the problem.

12.2 Material Compatibility

High concentrations of some acids may cause staining if in the constant contact with Polypropylene. Once it has penetrated the surface of the material, only option would be to replace the surface, if at all possible.

See chemical resistance guide on following page for Polypropylene and other various types of plastics.

CHEMICAL RESISTANCE GUIDE

PLEASE NOTE: This guide is intended as general information only. Since each pair of ratings listed is for *ideal* conditions, consider all factors when evaluating chemical resistance.

MATERIALS KEY:

LDPE - Low Density Polyethylene
 HDPE - High Density Polyethylene
 PP/PA - Polypropylene/Polypropylene Copolymer
 PMP - Polymethylpentene
 PC - Polycarbonate

PVC - Polyvinyl Chloride
 PSF - Polysulfone
 FEP - Teflon® FEP
 TFE - Teflon® TFE
 PFA - Teflon® PFA

RATINGS KEY: E - Excellent G - Good F - Fair N - Not Recommended
 First letter of each pair applies to conditions at 20°C; the second to those at 50°C.

▼ CHEMICAL	MATERIAL ►	LDPE	HDPE	PP/ PPCO	PMP	FEP/ TFE/ PFA	PC	RIGID PVC	PSF
Acetaldehyde		GN	GF	GN	GN	EE	FN	GN	NN
Acetamide (saturated)		EE	EE	EE	EE	EE	NN	NN	NN
Acetic Acid (5%)		EE	EE	EE	EE	EE	EG	EE	EE
Acetic Acid (50%)		EE	EE	EE	EE	EE	EG	EG	GG
Acetone		NN	NN	EE	EE	EE	NN	NN	NN
Acetonitrile		EE	EE	FN	FN	EE	NN	NN	NN
Acrylonitrile		EE	EE	FN	FN	EE	NN	NN	NN
Adipic Acid		EG	EE	EE	EE	EE	EE	EG	GG
Alanine		EE	EE	EE	EE	EE	NN	NN	NN
Allyl Alcohol		EE	EE	EE	EG	EE	GF	GF	GF
Aluminum Hydroxide		EG	EE	EG	EG	EE	FN	EG	GG
Aluminum Salts		EE	EE	EE	EE	EE	EG	EE	EE
Amino Acids		EE	EE	EE	EE	EE	EE	EE	EE
Ammonia		EE	EE	EE	EE	EE	NN	EG	GF
Ammonium Acetate (saturated)		EE	EE	EE	EE	EE	EE	EE	EE
Ammonium Glycolate		EG	EE	EG	EG	EE	GF	EE	GG
Ammonium Hydroxide (5%)		EE	EE	EE	EE	EE	FN	EE	GG
Ammonium Hydroxide (30%)		EG	EE	EG	EG	EE	NN	EG	GG
Ammonium Oxalate		EG	EE	EG	EG	EE	EE	EE	EE
Ammonium Salts		EE	EE	EE	EE	EE	EG	EG	EE
n-Amyl Acetate		GF	EG	GF	GF	EE	NN	NN	NN
Amyl Chloride		NN	FN	NN	NN	EE	NN	NN	NN
Aniline		EG	EG	GF	GF	EE	FN	NN	NN
Benzaldehyde		EG	EE	EG	EG	EE	FN	NN	FF
Benzene		NN	NN	NN	GF	EE	NN	NN	NN
Benzoic Acid (saturated)		EE	EE	EG	EG	EE	EG	EG	FF
Benzyl Acetate		EG	EE	EG	EG	EE	FN	NN	NN
Benzyl Alcohol		NN	FN	NN	NN	EE	NN	GF	NN
Bromine		NN	FN	NN	NN	EE	FN	GN	NN
Bromobenzene		NN	FN	NN	NN	EE	NN	NN	NN
Bromoform		NN	NN	NN	NN	EE	NN	NN	NN
Butadiene		NN	FN	NN	NN	EE	NN	FN	NN
n-Butyl Acetate		GF	EG	GF	GF	EE	NN	NN	NN
n-Butyl Alcohol		EE	EE	EE	EG	EE	GF	GF	GF
sec-Butyl Alcohol		EG	EE	EG	EG	EE	GF	GG	GF
tert-Butyl Alcohol		EG	EE	EG	EG	EE	GF	EG	GF
Butyric Acid		NN	FN	NN	NN	EE	FN	GN	GG

▼ CHEMICAL	MATERIAL ►	LDPE	HDPE	PP/ PPCO	PMP	FEP/ TFE/ PFA	PC	RIGID PVC	PSF
Calcium Hydroxide (concentrated)		EE	EE	EE	EE	EE	NN	EE	GG
Calcium Hypochlorite (saturated)		EE	EE	EE	EG	EE	FN	GF	EE
Carbazole		EE	EE	EE	EE	EE	NN	NN	NN
Carbon Disulfide		NN	NN	NN	NN	EE	NN	NN	NN
Carbon Tetrachloride		FN	GF	GF	NN	EE	NN	GF	NN
Cedarwood Oil		NN	FN	NN	NN	EE	GF	FN	FF
Cellosolve Acetate		EG	EE	EG	EG	EE	FN	FN	NN
Chlorine (10% in air)		GN	EF	GN	GN	EE	EG	EE	NN
Chlorine (10% (moist))		GN	GF	FN	GN	EE	GF	EG	NN
Chloroacetic Acid		EE	EE	EG	EG	EE	FN	FN	NN
p-Chloroacetophenone		EE	EE	EE	EE	EE	NN	NN	NN
Chloroform		FN	NN	NN	NN	EE	NN	NN	NN
Chromic Acid (10%)		EE	EE	EE	EE	EE	GF	EG	NN
Chromic Acid (50%)		EE	EE	GF	GF	EE	FN	EF	NN
Cinnamon Oil		NN	FN	NN	NN	EE	GF	NN	FF
Citric Acid (10%)		EE	EE	EE	EE	EE	EG	GG	EE
Cresol		NN	FN	GF	NN	EE	NN	NN	NN
Cyclohexane		FN	FN	FN	NN	EE	EG	GF	NN
Decalin		GF	EG	GF	FN	EE	NN	EG	NN
o-Dichlorobenzene		FN	FF	FN	FN	EE	NN	NN	NN
p-Dichlorobenzene		FN	GF	GF	GF	EE	NN	NN	NN
Diethyl Benzene		NN	FN	NN	NN	EE	FN	NN	NN
Diethyl Ether		NN	FN	NN	NN	EE	NN	FN	NN
Diethyl Ketone		NN	NN	GG	GF	EE	NN	NN	NN
Diethyl Malonate		EE	EE	EE	EG	EE	FN	GN	FF
Diethylene Glycol		EE	EE	EE	EE	EE	GF	FN	GG
Diethylene Glycol Ethyl Ether		EE	EE	EE	EE	EE	FN	FN	FF
Dimethylformamide		EE	EE	EE	EE	EE	NN	FN	NN
Dimethyl Sulfoxide		EE	EE	EE	EE	EE	NN	NN	NN
1, 4-Dioxane		GF	GG	GF	GF	EE	GF	FN	GF
Dipropylene Glycol		EE	EE	EE	EE	EE	GF	GF	GG
Ether		NN	FN	NN	NN	EE	NN	FN	NN
Ethyl Acetate		EE	EE	EE	FN	EE	NN	NN	NN
Ethyl Alcohol (Absolute)		EG	EE	EG	EG	EE	EG	EG	EG
Ethyl Alcohol (40%)		EG	EE	EG	EG	EE	EG	EE	EG
Ethyl Benzene		NN	NN	NN	NN	EE	NN	NN	NN
Ethyl Benzoate		FF	GG	GF	GF	EE	NN	NN	NN
Ethyl Butyrate		GN	GF	GN	FN	EE	NN	NN	NN
Ethyl Chloride (liquid)		FN	FF	FN	FN	EE	NN	NN	NN
Ethyl Cyanoacetate		EE	EE	EE	EE	EE	FN	FN	FF
Ethyl Lactate		EE	EE	EE	EE	EE	FN	FN	FF
Ethylene Chloride		GN	GF	FN	NN	EE	NN	NN	NN
Ethylene Glycol		EE	EE	EE	EE	EE	GF	EE	EE
Ethylene Glycol Methyl Ether		EE	EE	EE	EE	EE	FN	FN	FF
Ethylene Oxide		FF	GF	FF	FN	EE	FN	FN	EE
Fluorides		EE	EE	EE	EE	EE	EE	EE	EE
Fluorine		FN	GN	FN	FN	EG	GF	EG	NN
Formaldehyde (10%)		EE	EE	EE	EG	EE	EG	GF	GF

▼ CHEMICAL	MATERIAL ►	LDPE	HDPE	PP/ PPCO	PMP	FEP/ TFE/ PFA	PC	RIGID PVC	PSF
Formaldehyde (40%)		EG	EE	EG	EG	EE	EG	GF	GF
Formic Acid (3%)		EG	EE	EG	EG	EE	EG	GF	GG
Formic Acid (50%)		EG	EE	EG	EG	EE	EG	GF	GG
Formic Acid (98-100%)		EG	EE	EG	EF	EE	EF	FN	FF
Fuel Oil		FN	GF	EG	GF	EE	EG	EE	EG
Gasoline		FN	GG	GF	GF	EE	FF	GN	FF
Glacial Acetic Acid		EG	EE	EG	EG	EE	NN	EG	FN
Glycerin		EE	EE	EE	EE	EE	EE	EE	EE
n-Heptane		FN	GF	FF	FF	EE	EG	GF	EG
Hexane		NN	GF	GF	FN	EE	FN	GN	EG
Hydrochloric Acid (1-5%)		EE	EE	EE	EG	EE	EE	EE	EE
Hydrochloric Acid (20%)		EE	EE	EE	EG	EE	GF	EG	EE
Hydrochloric Acid (35%)		EE	EE	EG	EG	EE	NN	GF	EE
Hydrofluoric Acid (4%)		EG	EE	EG	EG	EE	GF	GF	GF
Hydrofluoric Acid (48%)		EE	EE	EE	EE	EE	NN	GF	FN
Hydrogen Peroxide (3%)		EE	EE	EE	EE	EE	EE	EE	EE
Hydrogen Peroxide (30%)		EG	EE	EG	EG	EE	EE	EE	EE
Hydrogen Peroxide (90%)		EG	EE	EG	EG	EE	EE	EG	EE
Isobutyl Alcohol		EE	EE	EE	EG	EE	EG	EG	EG
Isopropyl Acetate		GF	EG	GF	GF	EE	NN	NN	NN
Isopropyl Alcohol		EE	EE	EE	EE	EE	EE	EG	EE
Isopropyl Benzene		FN	GF	FN	NN	EE	NN	NN	NN
Kerosene		FN	GG	GF	GF	EE	EE	EE	GF
Lactic Acid (3%)		EG	EE	EG	EG	EE	EG	GF	EE
Lactic Acid (85%)		EE	EE	EG	EG	EE	EG	GF	EE
Methoxyethyl Oleate		EG	EE	EG	EG	EE	FN	NN	NN
Methyl Alcohol		EE	EE	EE	EE	EE	GF	EF	GF
Methyl Ethyl Ketone		NN	NN	EG	NN	EE	NN	NN	NN
Methyl Isobutyl Ketone		NN	NN	GF	FF	EE	NN	NN	NN
Methyl Propyl Ketone		GF	EG	GF	FF	EE	NN	NN	NN
Methylene Chloride		FN	FN	FN	FN	EE	NN	NN	NN
Mineral Oil		GN	EE	EE	E&	EE	EG	EG	EE
Nitric Acid (1-10%)		EE	EE	EE	EE	EE	EG	EG	EF
Nitric Acid (50%)		GN	GN	FN	GN	EE	GF	GF	GF
Nitric Acid (70%)		FN	GN	NN	GF	EE	NN	FN	NN
Nitrobenzene		NN	FN	NN	NN	EE	NN	NN	NN
n-Octane		EE	EE	EE	EE	EE	GF	FN	GF
Orange Oil		FN	GF	GF	FF	EE	FF	FN	FF
Ozone		EG	EE	EG	EE	EE	EG	EG	EE
Perchloric Acid		GN	GN	GN	GN	GF	NN	GN	NN
Perchloroethylene		NN	NN	NN	NN	EE	NN	NN	NN
Phenol, Crystals		GN	GF	GN	FG	EE	FN	FN	FF
Phosphoric Acid (1-5%)		EE	EE	EE	EE	EE	EE	EE	EE
Phosphoric Acid (85%)		EE	EE	EG	EG	EE	EG	EG	EE
Pine Oil		GN	EG	EG	GF	EE	GF	FN	FF
Potassium Hydroxide (1%)		EE	EE	EE	EE	EE	FN	EE	EE
Potassium Hydroxide (conc.)		EE	EE	EE	EE	EE	NN	EG	EE
Propane Gas		NN	FN	NN	NN	EE	FN	EG	FF
Propylene Glycol		EE	EE	EE	EE	EE	GF	FN	GG
Propylene Oxide		EG	EE	EG	EG	EE	GF	FN	GG
Resorcinol (saturated)		EE	EE	EE	EE	EE	GF	FN	NN
Resorcinol (5%)		EE	EE	EE	EE	EE	GF	GN	NN


13.0 REPLACEMENT PARTS LIST


The following is a list of replacement parts. For replacement of electrical parts, refer to the electrical schematic. Please consult NuAire, Inc. for parts not listed. To order, specify: model no., serial no. and part no.

Replacement Parts List

Model No.	HEPA Filter	HEPEX Plenum	Diffuser	Window
NU-156-424	24 x 36 x 6 A-980944-01	B-155-2129-01	B-151-1826-01	B-156-2099-01
NU-156-430	30 x 36 x 6 A-980944-04	B-155-2129-02	B-151-1826-05	B-156-2099-01
NU-156-524	24 x 48 x 6 A-980944-02	B-155-2129-03	B-151-1826-02	B-156-2099-02
NU-156-530	30 x 48 x 6 A-980944-05	B-155-2129-04	B-151-1826-06	B-156-2099-02
NU-156-624	24 x 60 x 6 A-980944-03	B-155-2129-05	B-151-1826-03	B-156-2099-03
NU-156-630	30 x 60 X 6 A-980944-06	B-155-2129-06	B-151-1826-07	B-156-2099-03
NU-156-824	24 x 84 x 6 A-156-2709-01	B-155-2129-07	B-151-1826-04	B-156-2099-04
NU-156-830	30 x 84 x 6 A-156-2709-02	B-155-2129-08	B-151-1826-08	B-156-2099-04

***Standard HEPA filter initial resistance is rated at 0.5” w.g. (12mm w.g.) at 100 LFPM (.51 m/s)
(separatorless) ULPA filter initial resistance is rated at 0.65” w.g. (16mm w.g.) at 100 LFPM (.51 m/s).**

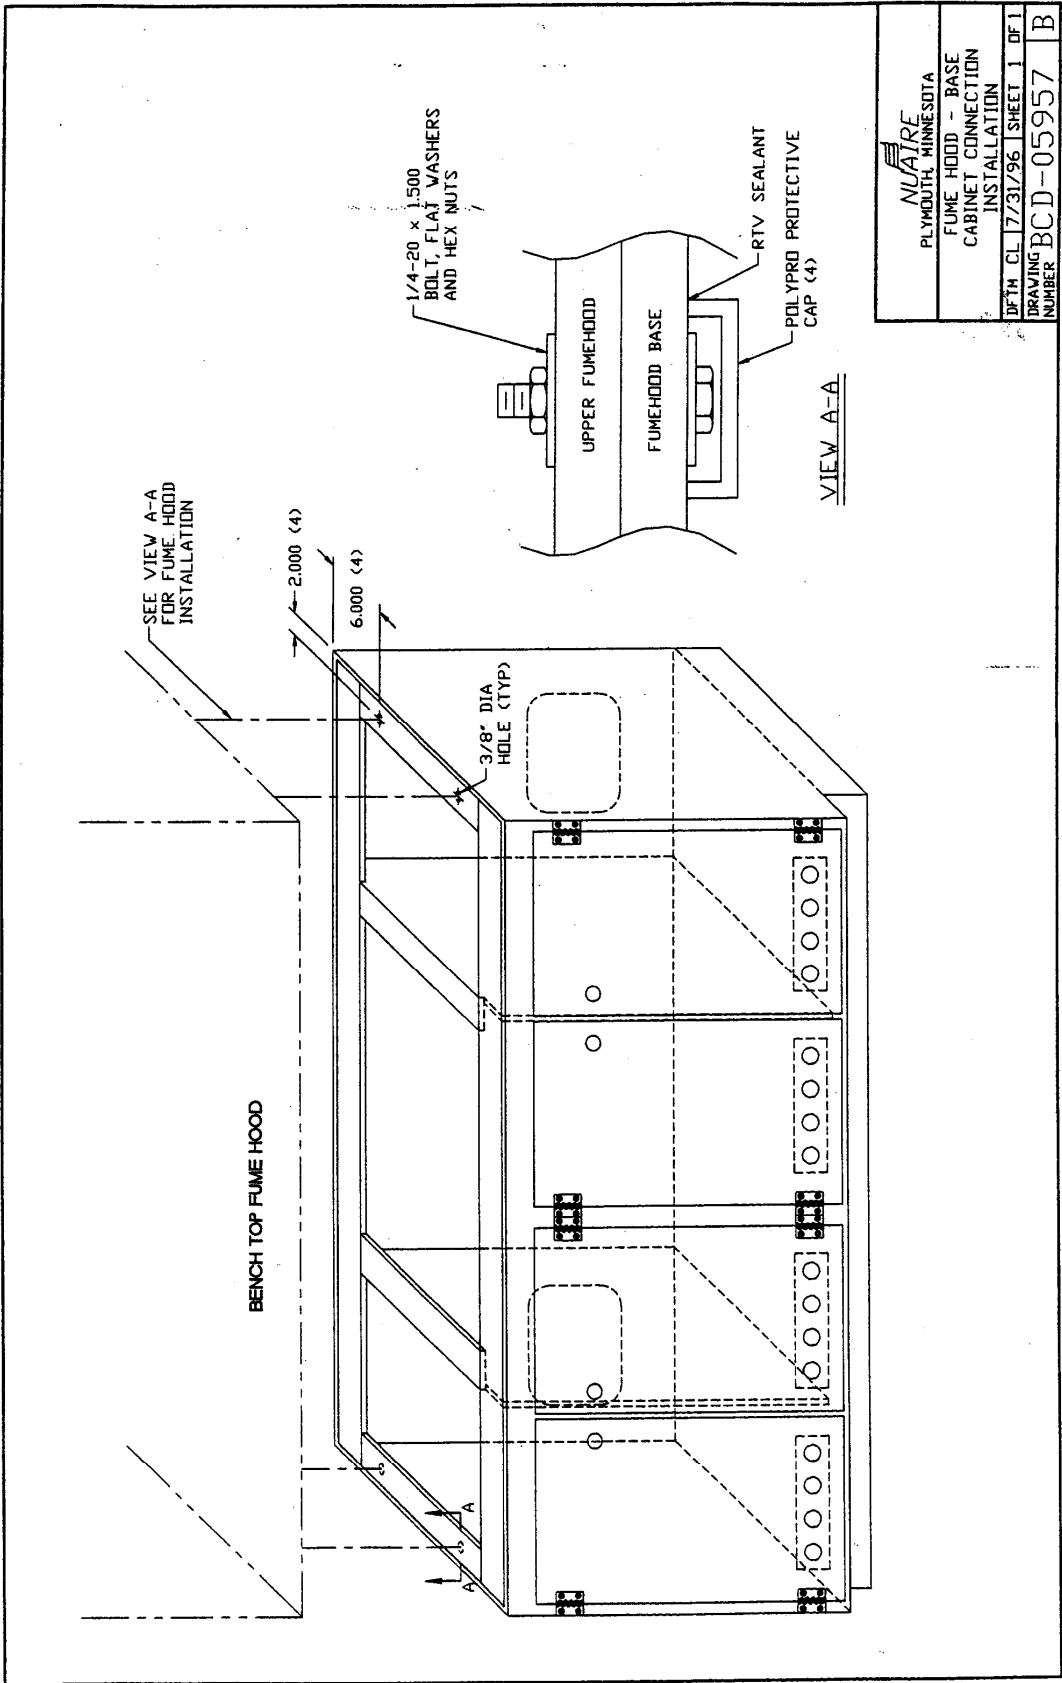

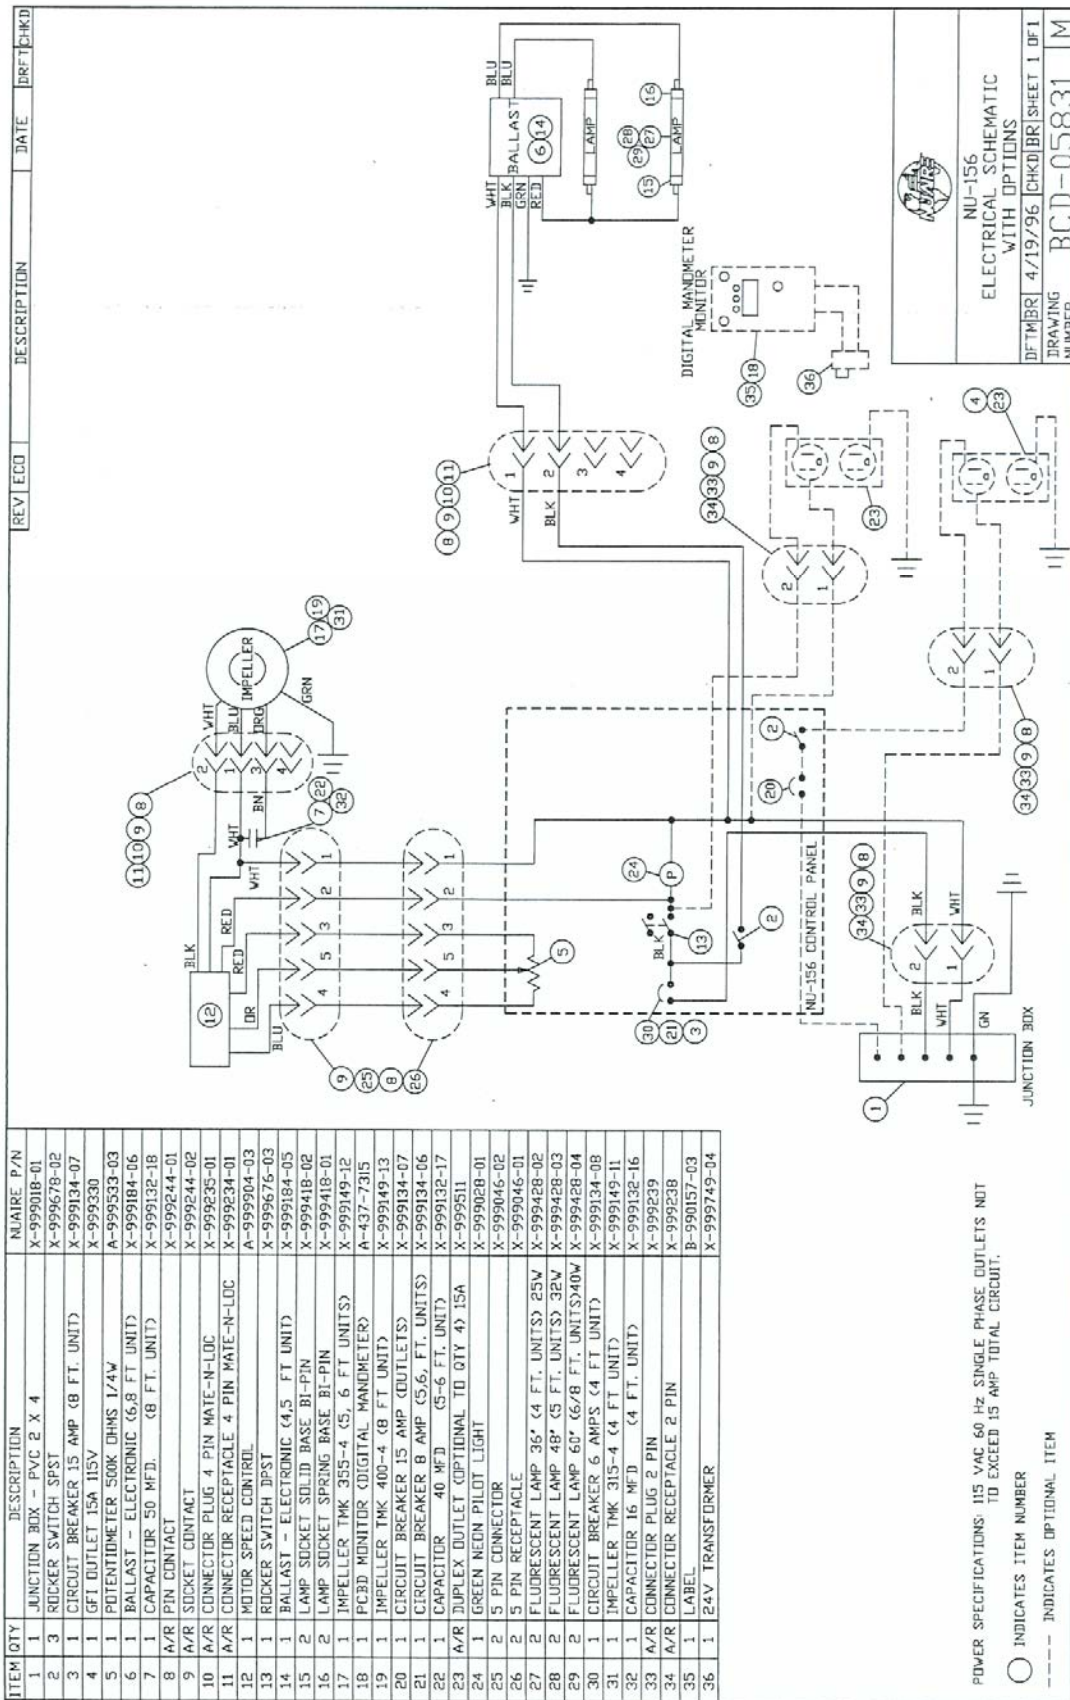

REV	ECO	DESCRIPTION	DATE	DRFT	CHKD

NU-156
 ELECTRICAL SCHEMATIC
 WITH OPTIONS
 DFTMBR 4/19/96 [CHKD]BR SHEET 1 OF 1
 DRAWING NUMBER BCD-05831 M