


STANDALONE SYSTEMS

SILENT SENTRY SACS 1200 Watt Series

Modular Cabinet Design Offers a Customizable Solution:

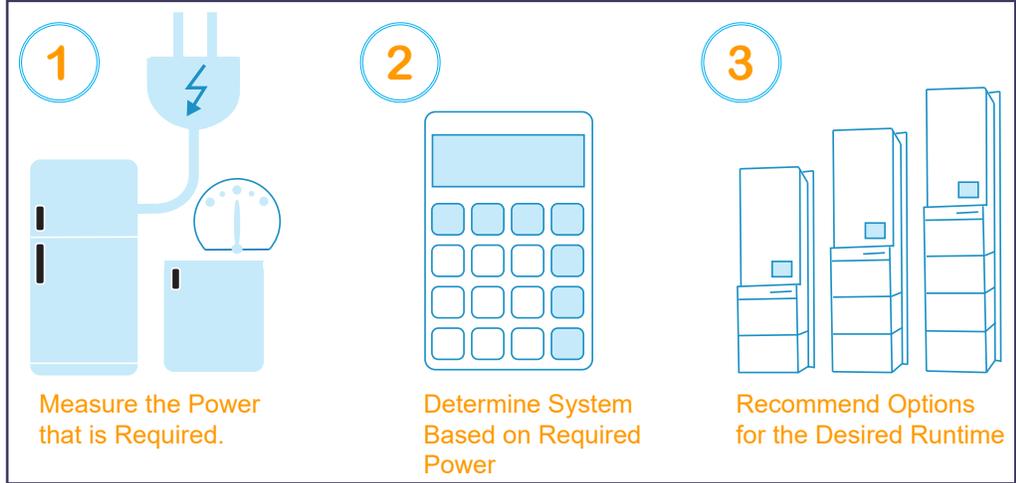

Applications:

- Vaccine Refrigerators
- Lab Equipment
- Incubators
- Mission Critical Medical Devices


Features:

- Internal Transfer Switch
- 1 Duplex Outlet
- Easy to Use Control
- 2 Year Warranty
- 4 Year Prorated Battery Warranty
- Space Saving Design
- No Ventilation Necessary
- No Exhaust or Fumes
- Automatic Transfer (less than 1 sec)
- Audible Low Battery Alarm
- 10' 12 Gauge Power Cord

HOW OUR SYSTEMS WORK:


STANDBY MODE

Utility power charges the system and flows through to power the appliance.

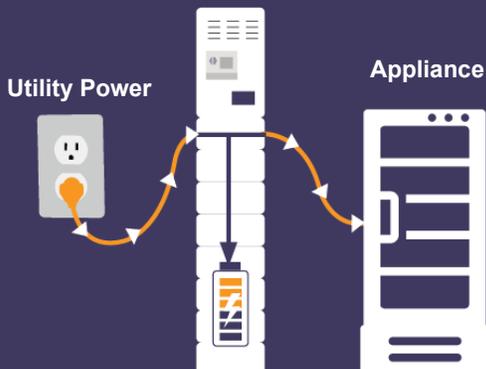


POWER OUTAGE

When utility power is lost the system auto transfers to draw from the battery bank within a second

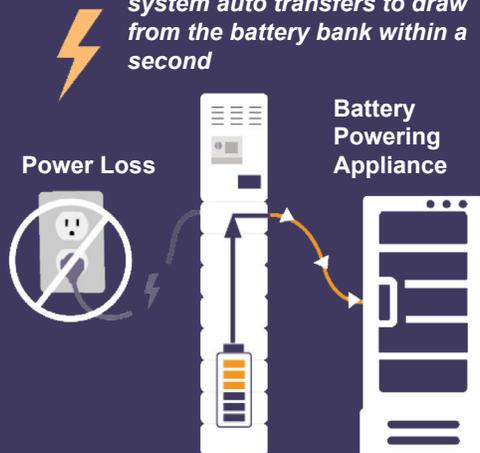

RECHARGE MODE

When utility power is restored the system auto transfers back to utility power.

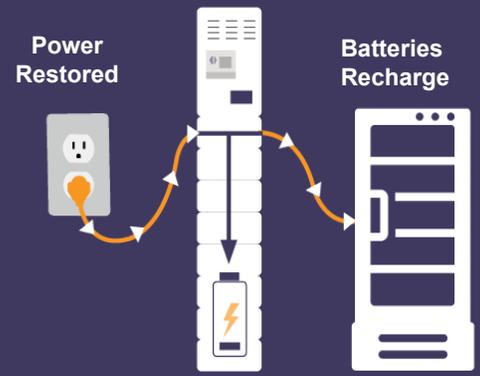



STANDALONE SYSTEMS

SILENT SENTRY SACS 1200 Watt Series

| Model Numbers | Watts | Surge Watts | KWH | Waveform | Height (In) | Weight (lbs) | Feet Included |
|---------------|-------|-------------|-----|----------|-------------|--------------|---------------|
| SACS1210T | 1200 | 2400 | 1.2 | Modified | 16.25 | 160 | No |
| SACS1220T | 1200 | 2400 | 2.4 | Modified | 24.00 | 260 | No |
| SACS1230T | 1200 | 2400 | 3.6 | Modified | 35.75 | 350 | Yes |
| SACS1240T | 1200 | 2400 | 4.8 | Modified | 43.50 | 430 | Yes |

OTHER OPTIONS:

| Voltage | Circuit Size (Amps) | NEMA Number |
|---------|---------------------|--|
| 120 | 15 A | 5-15  |

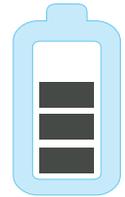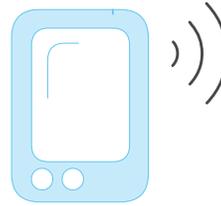

Heat Output:

Full Bulk Charge Mode: 1450 BTU per hr
Inverting @ Full Rated Wattage: 2250 BTU per hr
Inverting @ 0 Watts: 85 BTU per hr


Power Outage Alert:

The optional power outage alert system calls you when a power outage occurs. This feature offers you peace of mind and better control when dealing with power failures.

Battery Monitor Kit:


The optional battery monitor kit enables you to remotely monitor the battery during a power outage via the internet, by offering an estimated runtime based upon the rate of discharge.

UNIT DIMENSIONS

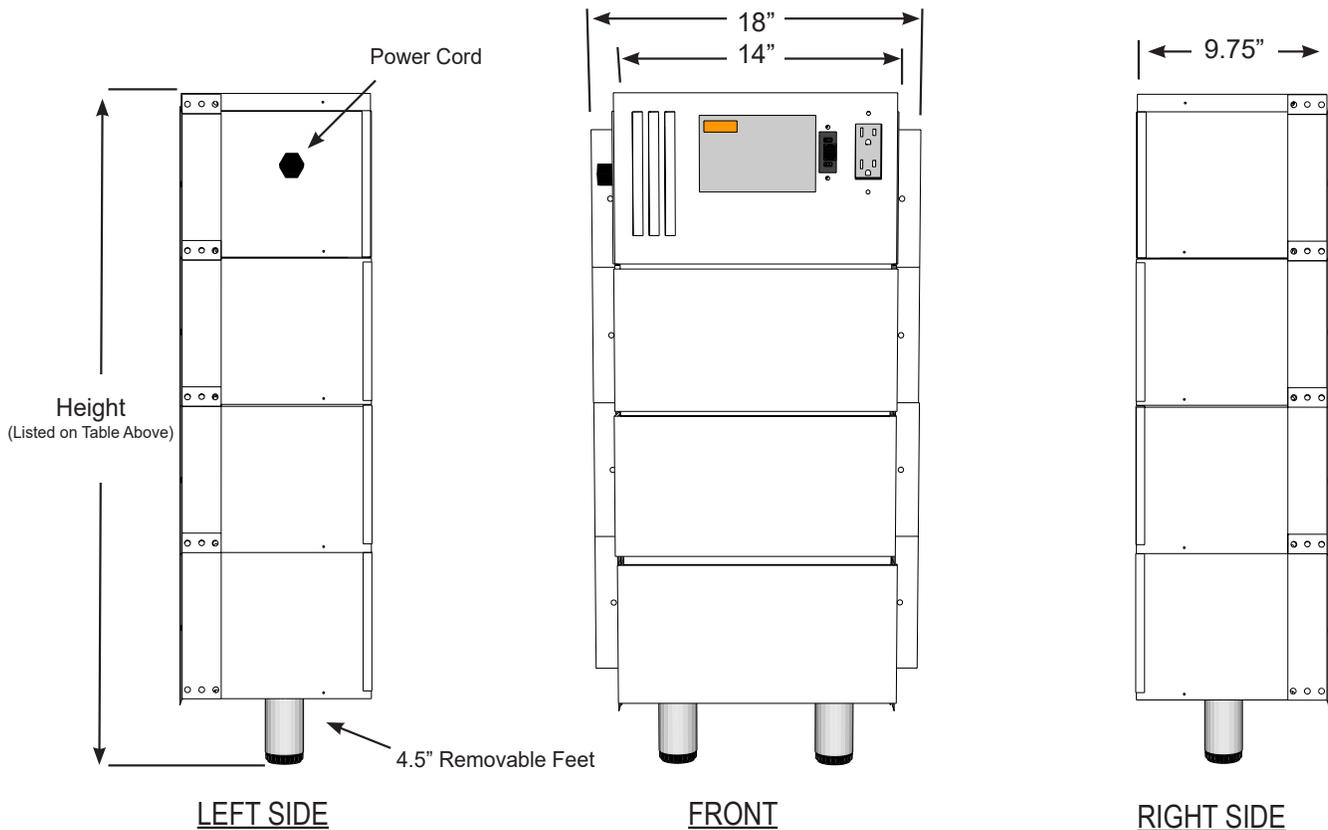


STANDALONE SYSTEMS

SILENT SENTRY SSA & SACS Series

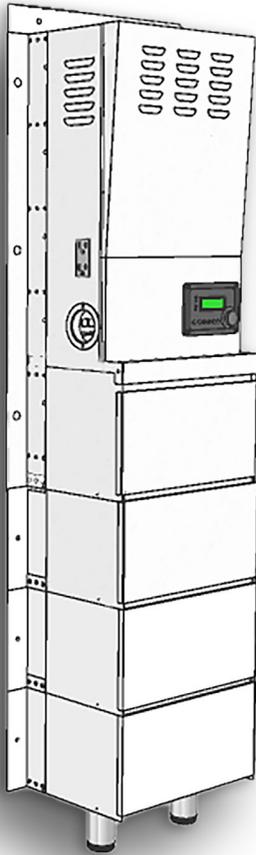

Modular Cabinet Design Offers a Customizable Solution:

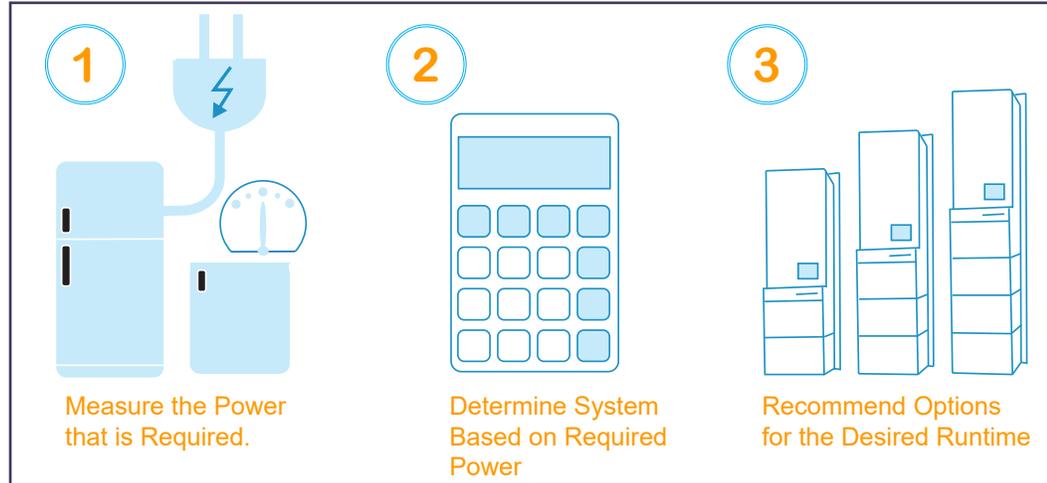

Applications:

- -80° Freezers
- Vaccine Refrigerators
- Fume Hoods
- Sensitive Lab Equipment
- Operating Room Equipment
- Incubators
- Histology Equipment
- Imaging Equipment
- Mission Critical Medical Devices


Features:

- Internal Transfer Switch
- 2 Duplex Outlets
- Digital Control LCD Screen
- 2 Year Warranty
- 4 Year Prorated Battery Warranty
- Space Saving Design
- No Ventilation Necessary
- No Exhaust or Fumes
- Auto Transfers in less than 1 Sec.
- Audible Low Battery Alarm

HOW OUR SYSTEMS WORK:


STANDBY MODE

Utility power charges the system and flows through to power the appliance.

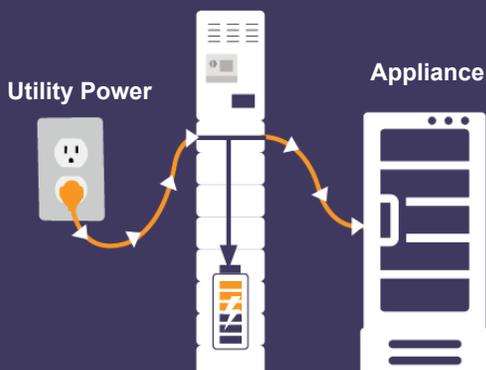


POWER OUTAGE

When utility power is lost the system auto transfers to draw from the battery bank within a second

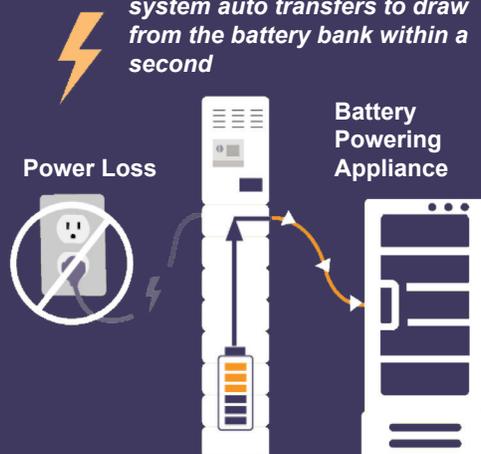

RECHARGE MODE

When utility power is restored the system auto transfers back to utility power.

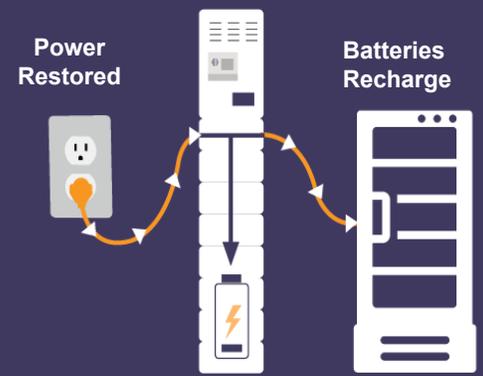

STANDALONE SYSTEMS

SILENT SENTRY SSA & SACS Series

| Model Numbers | | Watts | Surge Watts | KWH | Waveform | Height (In) | Weight (lbs) |
|---------------|------------|-------|-------------|-----|----------|-------------|--------------|
| SSA2020V | SACS2020V | 2000 | 4000 | 2.4 | Modified | 43.00 | 300 |
| SSA2030V | SACS2030V | 2000 | 4000 | 3.6 | Modified | 54.50 | 380 |
| SSA2040V | SACS2040V | 2000 | 4000 | 4.8 | Modified | 62.25 | 460 |
| SSA2060V | SACS2060V | 2000 | 4000 | 7.2 | Modified | 77.75 | 630 |
| SSA2080V | SACS2080V | 2000 | 4000 | 9.6 | Modified | 93.25 | 800 |
| SSA3020V | SACS3020V | 3000 | 6000 | 2.4 | Modified | 43.00 | 300 |
| SSA3030V | SACS3030V | 3000 | 6000 | 3.6 | Modified | 54.25 | 380 |
| SSA3040V | SACS3040V | 3000 | 6000 | 4.8 | Modified | 62.25 | 460 |
| SSA3060V | SACS3060V | 3000 | 6000 | 7.2 | Modified | 77.75 | 630 |
| SSA3080V | SACS3080V | 3000 | 6000 | 9.6 | Modified | 93.25 | 800 |
| SSA4020MS | SACS4020MS | 4000 | 8000 | 2.4 | Pure | 43.00 | 300 |
| SSA4060MS | SACS4060MS | 4000 | 8000 | 7.2 | Pure | 77.75 | 630 |
| SSA4440MS | SACS4440MS | 4400 | 8800 | 4.8 | Pure | 62.25 | 460 |
| SSA4480MS | SACS4480MS | 4400 | 8800 | 9.6 | Pure | 93.25 | 800 |

Note: SSA and SACS models are the same configuration. SACS models support cold storage appliances, SSA models are for all other applications. 12 gauge 10' Detachable Power Cord Included (10 Gauge for 30 amp applications)

| System Wattage | Input Voltage | Input Circuit Size (Amps) | NEMA Number |
|----------------|---------------|---------------------------|---|
| 2000 | 120 | 15 A | 5-15  |
| 3000 | 120 | 20 A | 5-20  |
| 4000 | 120 or 240 | 20 A or 30 A | 5-20 or L5-30   |
| 4400 | 120 or 240 | 20 A or 30 A | 5-20 or L5-30   |

4000 & 4400 Watt systems come standard 20 amp. If 30 amp is required, specify with your order.


Heat Output: Full Bulk Charge Mode: 1450 BTU per hr
 Inverting @ Full Rated Wattage: 2250 BTU per hr
 Inverting @ 0 Watts: 85 BTU per hr

OTHER OPTIONS:



Power Outage Alert:


The optional power outage alert system calls you when a power outage occurs. This feature offers you peace of mind and better control when dealing with power failures.



Battery Monitor Kit:

The optional battery monitor kit enables you to remotely monitor the battery during a power outage via the internet, by offering an estimated runtime based upon the rate of discharge.

UNIT DIMENSIONS

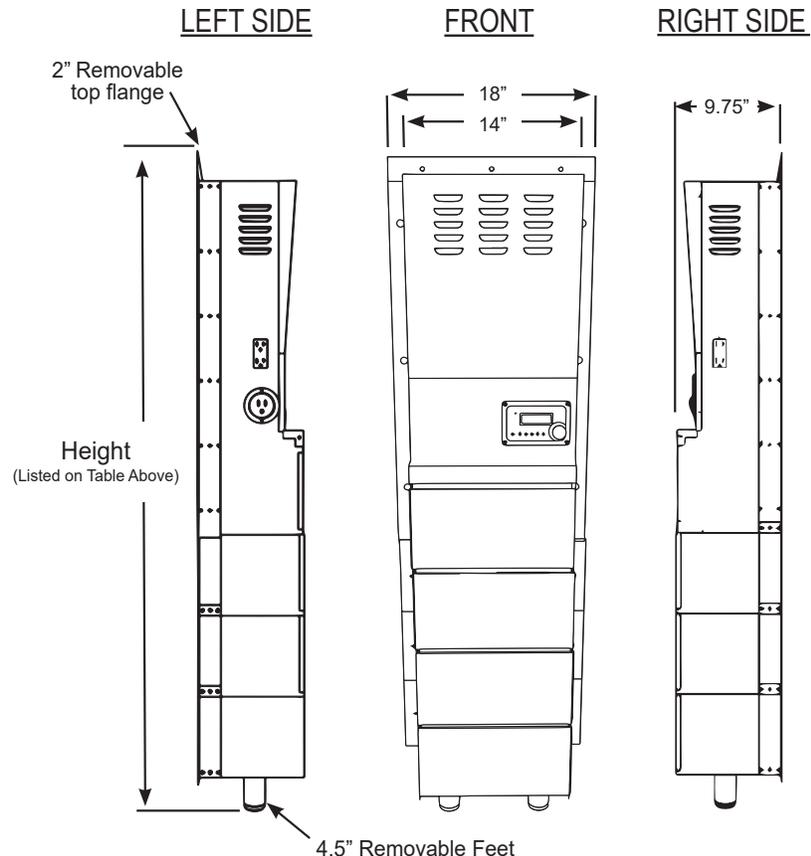


STANDALONE SYSTEMS

SILENT SENTRY SSA & SACS - Systems Larger than 66 Watt Hours



Modular Cabinet Design Offers a Customizable Solution:

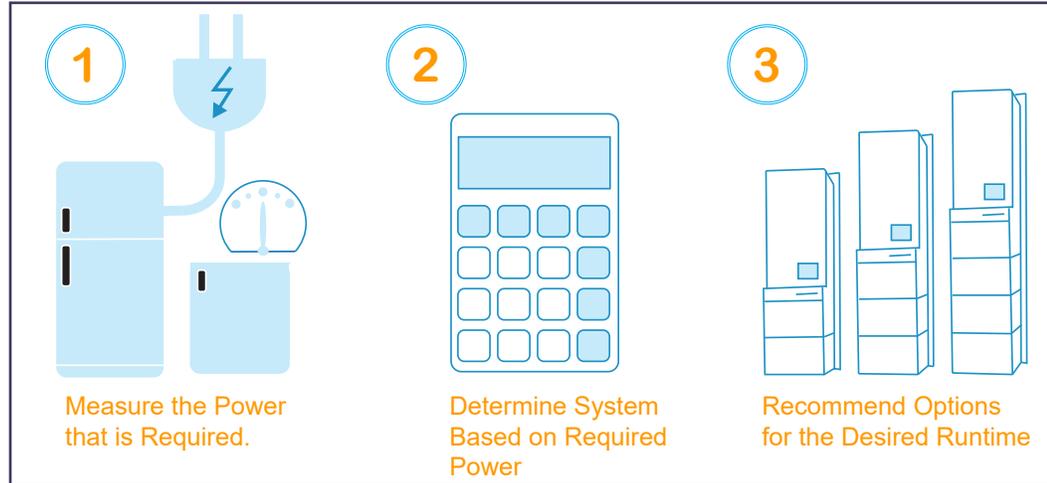

Applications:

- - 80° Freezers
- Vaccine Refrigerators
- Fume Hoods
- Sensitive Lab Equipment
- Operating Room Equipment
- Incubators
- Histology Equipment
- Imaging Equipment
- Mission Critical Medical Devices


Features:

- Internal Transfer Switch
- 2 Duplex Outlets
- Digital Control LCD Screen
- 2 Year Warranty
- 4 Year Prorated Battery Warranty
- Space Saving Design
- No Ventilation Necessary
- No Exhaust or Fumes
- Automatic Transfer (less than 1 sec)
- Audible Low Battery Alarm

HOW OUR SYSTEMS WORK:


STANDBY MODE

Utility power charges the system and flows through to power the appliance.

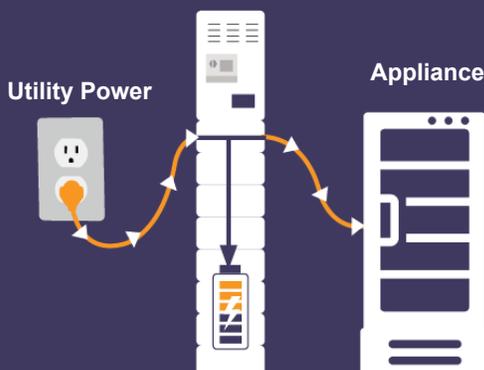


POWER OUTAGE

When utility power is lost the system auto transfers to draw from the battery bank within a second

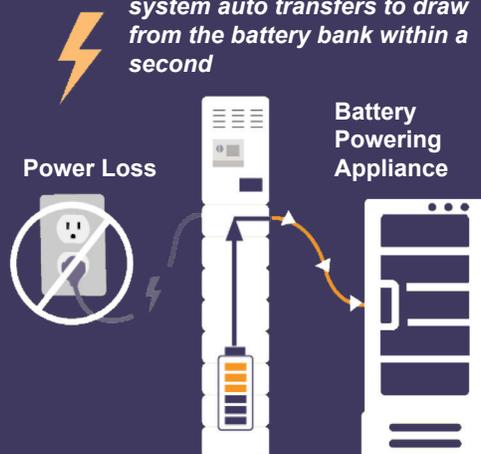

RECHARGE MODE

When utility power is restored the system auto transfers back to utility power.

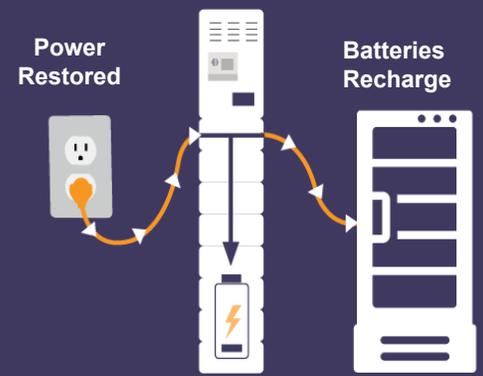

STANDALONE SYSTEMS

SILENT SENTRY SSA & SACS - Systems Larger than 66 Watt Hours

| Model Numbers | Watts | Surge Watts | KWH | Waveform | Height (In) | Weight (lbs) | Width (In) | Cabinets |
|------------------------|-------|-------------|------|----------|-------------|--------------|------------|----------|
| SSA20120V SACS20120V | 2000 | 4000 | 14.4 | Modified | 77.75 | 1200 | 38.00 | 2 |
| SSA20160V SACS20160V | 2000 | 4000 | 19.2 | Modified | 93.25 | 1560 | 38.00 | 2 |
| SSA40120MS SACS40120MS | 4000 | 8000 | 14.4 | Modified | 77.75 | 1200 | 38.00 | 2 |
| SSA40180MS SACS40180MS | 4000 | 8000 | 21.6 | Modified | 77.75 | 1770 | 58.00 | 3 |
| SSA44160MS SACS44160MS | 4400 | 8800 | 19.2 | Modified | 93.25 | 1560 | 38.00 | 2 |
| SSA44240MS SACS44240MS | 4400 | 8800 | 28.8 | Modified | 93.25 | 2320 | 58.00 | 3 |
| SSA44320MS SACS44320MS | 4400 | 8800 | 38.4 | Modified | 93.25 | 3120 | 78.00 | 4 |

Note: SSA and SACS models are the same configuration. SACS models support cold storage appliances, SSA models are for all other applications.
12 Gauge 10' Power Cord Included (10 Gauge for 30 amp applications)


Heat Output:

Full Bulk Charge Mode: 1450 BTU per hr
Inverting @ Full Rated Wattage: 2250 BTU per hr
Inverting @ 0 Watts: 85 BTU per hr


UNIT DIMENSIONS

| System Wattage | Input Voltage | Input Circuit Size (Amps) | NEMA Number |
|----------------|---------------|---------------------------|---|
| 2000 | 120 | 15 A | 5-15  |
| 4000 | 120 or 240 | 20 A or 30 A | 5-20 or L5-30   |
| 4400 | 120 or 240 | 20 A or 30 A | 5-20 or L5-30   |

4000 & 4400 Watt systems come standard 20 amp.
If 30 amp is required, specify with your order.

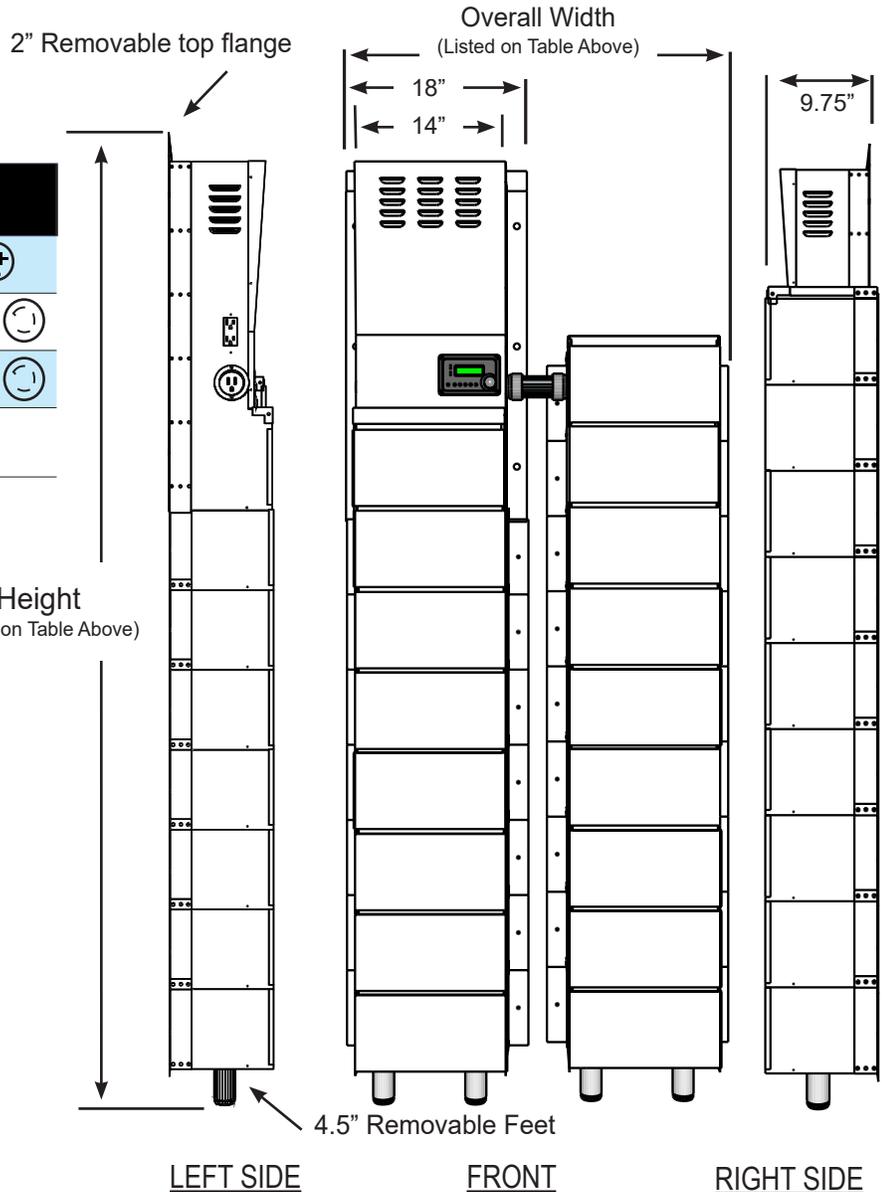

OTHER OPTIONS:

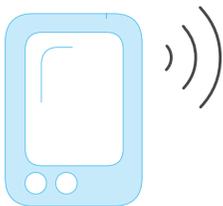

Power Outage Alert:

The optional power outage alert system calls you when a power outage occurs. This feature offers you peace of mind and better control when dealing with power failures.



Battery Monitor Kit:

The optional battery monitor kit enables you to remotely monitor the battery during a power outage via the internet, by offering an estimated runtime based upon the rate of discharge.